INTRODUCTION

WHAT IS IN THIS MANUAL

Congratulations on your purchase of a LaCie 4big Rack Office. This user manual gives you step-by-step instructions on installation, hardware maintenance, and troubleshooting. If you encounter problems, check Getting Help.



Please refer to <u>Warranty Information</u> before performing any hardware repairs or maintenance that is not described in this manual.

WHO SHOULD USE THIS GUIDE

This user guide assumes that you have a working knowledge of storage application products. If you do not have these skills, or are not confident with the instructions in this guide, do not proceed with the installation.

BOX CONTENT

- LaCie 4big Rack Office
- Ethernet cable
- Power supply cable
- DVD with software
- Quick Install Guide

Important info: Please save your packaging. In the event that the product should need to be repaired or serviced, it must be returned in its original packaging.

Introduction 1

MINIMUM SYSTEM REQUIREMENTS

Important Info: Your storage needs to be connected to a DHCP server to allow proper automatic remote server setup.

Client Types

- Windows XP, Windows Vista[™], Windows 7
- Mac OS X 10.5.x and later (through SMB)
- Linux 2.4 (through SMB)

Important info:

Your LaCie product's performance can be affected by such external forces as network activity, hardware, distance, and setup.

For optimal performance, use Gigabit Ethernet equipment.

Introduction 2