


LED & BUZZER


Your LaCie product features a multi-functional LED/button on the front, as well as five drive status LEDs on the rear. It also features a temperature alert buzzer.

FRONT LED

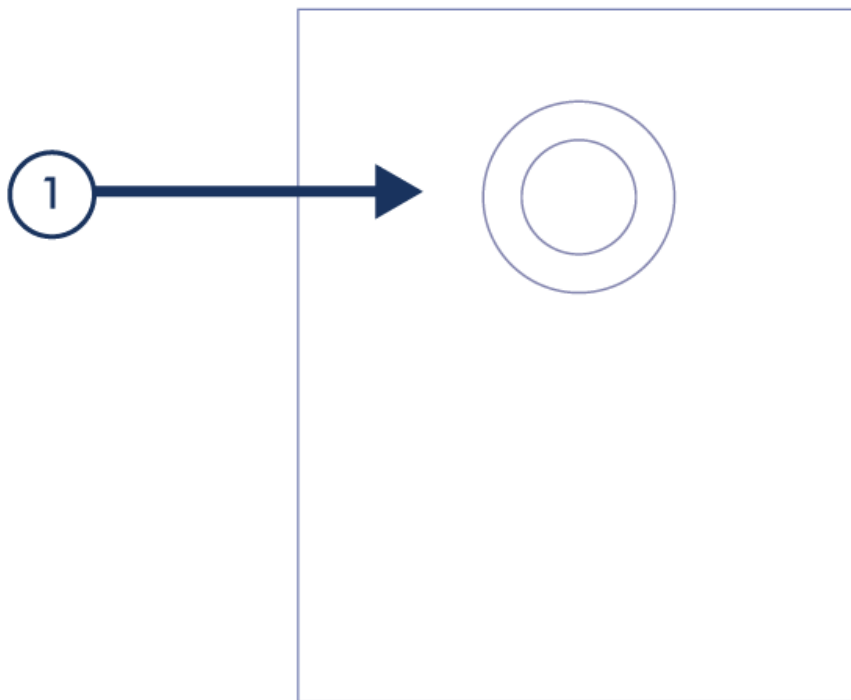

State	Indication
Off	Product is turned off or power supply is disconnected
Solid blue	Turned on
Solid red	Fan disconnected or non-functional

DISK LEDS

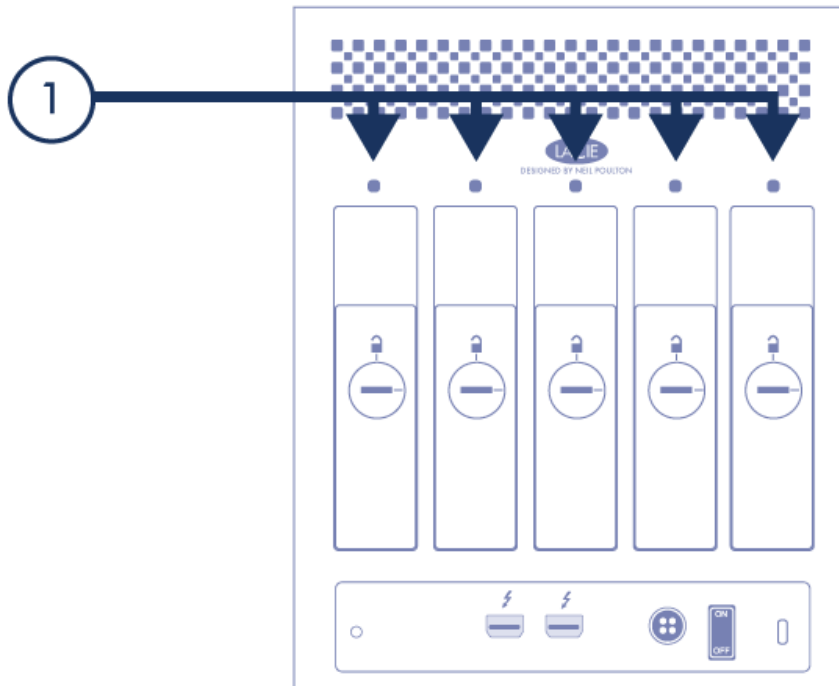

State	Indication
Off	No disk or non-functional disk
Solid blue	Disk OK but not in use
Flickering blue	Disk activity

BUZZER

A buzzer will sound to indicate a temperature alert. Simultaneously, the front LED will turn red.

You can turn off the buzzer by pressing the front button, but the LED will stay red.

In order to protect the hard disks from excessive heat, please discontinue use of the product. Contact [LaCie technical support](#).