ACCESS AND TRANSFER FILES

Your LaCie network hard drive provides access to data via storage volumes called **Shares**. You can copy, backup, and read files to and from shares similar to any local storage.

ABOUT DEFAULT AND USER SHARES

Default Shares

Your LaCie network storage has three shares by default (similar to folders): **MyShare**, **OpenShare**, and **USBShare**. USBShare will be created automatically when you allocate space for USB access; see <u>Dashboard</u> - <u>Drive Information</u> for details.

The following table sums up the differences between them:

Name	Accessibility	Login	Availability
OpenShare	Public, accessible to any user on the network	None	When connected to the network (Ethernet) and to networked computers or UPnP/DLNA-certified players/adapters (if the multimedia service is activated)
USBShare	Public, accessible to any user on the network	None	When connected to the network (Ethernet) or to a computer (USB), and through UPnP/DLNA-certified players/adapters (if the multimedia service is activated)
MyShare	Private, accessible only to the administrator by default	Password-protected	When connected to the network (Ethernet) and to networked computers

When your LaCie hard drive is connected to the network, all three shares are accessible to the administrator, and OpenShare and USBShare to guests (USBShare will only be available if you have allocated space for USB access). When the device is connected to a computer via the rear USB port, only USBShare will be accessible.

User Shares

New shares may be created by allotting storage capacity to individual users. For example, you may wish to give 5GB of private space to each member of the family. These shares will have the same names as the user (such as "Jane", "Logan", "Jake", etc.) and can be assigned passwords. See <u>Dashboard - Users</u> for instructions on adding users.

Name	Accessibility	Login	Availability
User Share ["Jane"]	Private with the option to assign a password	Optional password protection	When connected to the network (Ethernet) and to networked computers

ACCESS SHARES

You have several options for accessing shares on your LaCie storage drive.

Note: See <u>Advanced Accessibility Features</u> for related features such as accessing your device remotely, creating shortcuts to shares, and multimedia streaming.

Option 1 - LaCie Network Assistant (OpenShare and USBShare)

- 1. Launch LaCie Network Assistant. If you have not installed LaCie Network Assistant, see <u>Connect to the</u> <u>Network</u> for instructions.
 - Windows Users:
 - 1. Select LaCie Network Assistant in **Start > Programs**. The application icon will appear in the system tray and LaCie Network Assistant will automatically detect your LaCie device on the network.
 - 2. Right-click on the icon in the system tray.



Mac Users:

- 1. Select LaCie Network Assistant in your **Applications** folder. The application icon will appear in the menu bar and LaCie Network Assistant will automatically detect your LaCie device on the network.
- 2. Click on the icon in the menu bar.



2. Choose the name of your LaCie storage device to select the share you want to access.

Open	
OpenShare	
USBShare	Open LaCie Network Assistant
Web Access	NetworkSpace2
	Wake Up a Device
	Preferences
	Quit LaCie Network Assistant
	▲ <mark>15:25</mark> ▲ ペ 27/07/2011

3. The share will open in an Explorer window (Windows) or a Finder window (Mac).

ile Edit View Tools Help				
Organize New folder			₩ • 🗍	0
🔆 Favorites	Name	Date modified	Туре	Siz
🧮 Desktop	퉬 Music	22/07/2011 16:38	File folder	
🚺 Downloads	Je Photos	22/07/2011 16:38	File folder	
🔛 Recent Places	퉬 Videos	22/07/2011 16:38	File folder	
➢ Libraries Isomputer ▲ Local Disk (C:) ▲ CO Drive (D:) WHSRST3_EN				
🗣 Network				
	1	m		

4. Copy and paste or drag and drop files to transfer data between your computer and the share. Mac users: If the share does not open in a Finder window, simply navigate in the Finder to SHARED > [machine name]
 > [share name].

Access and Transfer Files

000	NetworkSpace2
► DEVICES	
▼ SHARED	
🎔 NetworkSpace2 🛛 📤	
▶ PLACES	NetworkSpace2
► SEARCH FOR	Connected as: Guest
	Connect As
	🜆 OpenShare 🔺 🕨
	🔤 USBShare 🕞
	н
	SHARED + NetworkSpace2

Important info: Please note that MyShare and User Shares will not appear on the list of shares unless the administrator or user has authenticated his Username and Password in LaCie Network Assistant. See Option 2 below.

Option 2 - LaCie Network Assistant (Authentication for MyShare or User Share)

- 1. Launch LaCie Network Assistant. If you have not installed LaCie Network Assistant, see <u>Connect to the</u> <u>Network</u> for instructions.
 - Windows Users: Select LaCie Network Assistant in Start > Programs. The application icon will appear in the system tray and LaCie Network Assistant will automatically detect your LaCie device on the network.
 - **Mac Users:** Select LaCie Network Assistant in your **Applications** folder. The application icon will appear in the system tray and LaCie Network Assistant will automatically detect your LaCie product on the network.
- 2. Open LaCie Network Assistant.
 - Windows Users: Click on the LaCie Network Assistant icon in the system tray
 - Mac Users: Click the LaCie Network Assistant icon in the menu bar to select **Open LaCie Network** Assistant...



3. Select your LaCie storage device machine name from the list of devices in the left-hand column, then click the **Volumes** tab.

	General Volumes Configuration		
etworkSpace2 Network Space 2	Logged in as: Guest	Authentica	tion
	Available network folders		
	Volume		Auto
	OpenShare	Mount as drive	
	USBShare	Mount as drive	
			_

4. Click Authentication...

• CaCie Network Assistant	_	8
	General Volumes Configuration	
NetworkSpace2 Network Space 2	Logged in as: Guest	Authentication
	Available network folders	
	Volume	Auto
	OpenShare	Mount as drive
	USBShare	Mount as drive

5. In the pop-up window, choose **Registered User** and enter the administrator Username and Password to view MyShare. To access a User Share, enter the User's name and Password created in the Dashboard

administra	ation tool (<u>D</u>	<u>ashboard - Users</u>). Click OK .		
💷 LaCie Net	work Assistant			
•	Enter an authorized Name and Password to mount the NetworkSpace2 volume.			
	Connect as:	🗇 Guest		
		Registered User		
	Name:	admin		
	Password:	•••••		
		Remember password		
		OK Cancel		
Administrator Authentication				
🔝 LaCie Network Assistant 🧱 💌				
•	Enter an authorized Name and Password to mount the NetworkSpace2 volume.			
	Connect as:	🔘 Guest		
		Registered User		
	Name:	Jane		
	Password:	••••		
		Remember password OK Cancel		

User Authentication

6. MyShare or the User Share ("Jane", in this example) will appear in the list of shares.



MyShare

	General Volumes Configuration	
tworkSpace2	Logged in as: Jane	Authentication
	Available network folders	
	Volume	Auto
	OpenShare	Mount as drive
	USBShare	Mount as drive
	Jane	Mount as drive

User Share

7. Click on **Mount as drive** (Windows) or **Mount** (Mac) to open the share.

LaCie Network Assistant						
-	General Volumes Configuration					
NetworkSpace2 Network Space 2	Logged in as: admin	Authentication				
	Available network folders					
	Volume	Auto				
	MyShare	Mount as drive				
	OpenShare	Mount as drive				
	USBShare	Mount as drive				

8. The share will be available in an Explorer window (Windows) or a Finder window (Mac). Copy and paste or drag and drop files to transfer data between your computer and the share.



User Share

Option 3 - Operating System

Windows 7 and Vista Users

1. In an Explorer window address field, type \\[machine name] or \\[IP address] and hit Enter.

	_			
	ACE2		👻 🤿 🛛 Search Comp	uter 🔎
File Edit View Tools He	lp			
Organize 🕶 Properties	System properties	Uninstall or char	nge a program 🛛 😕	II • 🖬 🔞
🖈 Favorites	Name > Hard Disk D	Drives (1)	Туре	Total Si
Cibraries	Devices wit	h Removable S	torage (2)	
1 Computer	Network Lo	cation (1)		
<table-of-contents> Network</table-of-contents>				



2. Click twice on OpenShare or USBShare to open either folder. You will be prompted for the Username and Password when clicking twice on MyShare (administrator) or a User Share.

Technical note: To find the IP address of your LaCie storage device, open **LaCie Network Assistant** and choose the **General** tab. The address will be listed next to the name of the device.



Windows XP Users

1. In an Explorer window address field, type **[machine name]** or **[IP address]** and click **Go**. Alternatively, from the Start menu, click **Run**, type **[machine name]** or **[IP address]** and click **OK**.

Mac Users

- 1. In your Finder, navigate to **Go > Connect to Server**.
- 2. In the dialogue window that opens, type one of the following:

afp://[machine name].local smb://[machine name].local afp://[IP address] smb://[IP address]

00	Connect to S	erver
Server Address:		
afp://NetworkS	oace2.local	+ 0-
Favorite Servers:		
? Remove	\supset	Browse Connect

3. Click **Connect** then enter the administrator Username and Password. Enter the Name and Password of a User to access his share.