

ADMINISTRATION (DASHBOARD)

The **Dashboard** is an easy-to-use browser-based administration tool that will allow you to manage users, shares, backups, and many other features.


DASHBOARD - ACCESSING

There are two ways to access the Dashboard:


- LaCie Network Assistant
- Web browser

Dashboard Access Using LaCie Network Assistant

1. Open LaCie Network Assistant:
 - Windows: Right-click on the LaCie Network Assistant icon in the system tray
 - Mac: Click on the LaCie Network Assistant icon in the menu bar
2. Choose **[machine name] > Web Access**

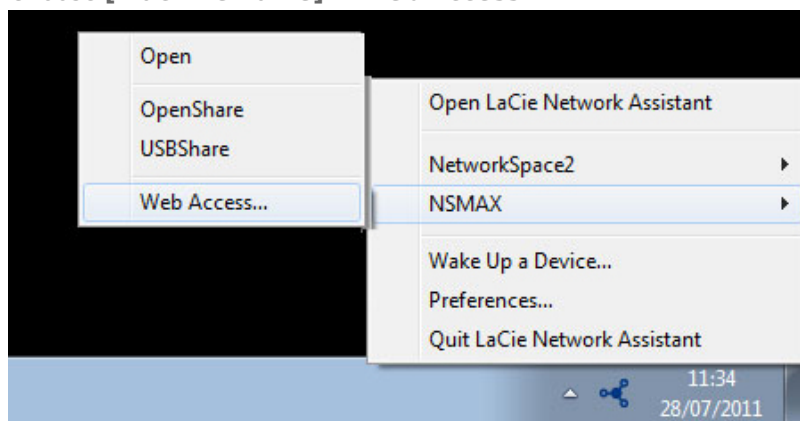

Windows

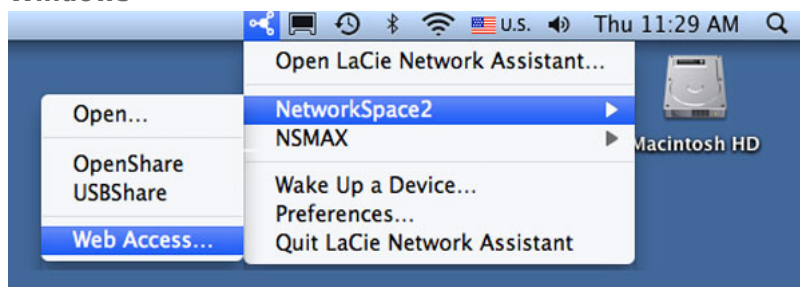

Mac

3. The login page will open in a new browser window or tab. If your browser is not open, LaCie Network Assistant will open it for you.
4. You will be prompted to complete a quick Setup Wizard the first time the Dashboard is accessed. Your password can run from 4-20 alphanumeric characters and symbols, and your username should be from 1-20 alphanumeric characters (see [Dashboard - First Logon](#)). In subsequent logins, simply type in the username and password you selected.



Connect to NSMAX

Login

Password

☐

Remember me

LOG ON

>> Switch to https

5. Click **LOG ON**.

Dashboard Access Using a Browser

1. Open your Internet browser (Firefox, Internet Explorer, Safari, etc.) and type your storage device's IP address or machine name in the browser's URL (web address) field.

For example: **http://[IP-address]** or **http://[machine name]** (Windows) or **http://[machine name].local** (Mac)



2. You will be prompted to complete a quick Setup Wizard the first time the Dashboard is accessed. Your password can run from 4-20 alphanumeric characters and symbols, and your username should be from 1-20 alphanumeric characters (see [Dashboard - First Logon](#)). In subsequent logins, simply type in the username and password you selected.




3. Click **LOG ON**.


Recovering a Lost Password

If the administrator has forgotten his password, it can be recovered if an SMTP server has been assigned with an email address. See [Dashboard - Network](#) for instructions on adding an email address.

1. On the login page, click **Have you lost or forgotten your password?**.

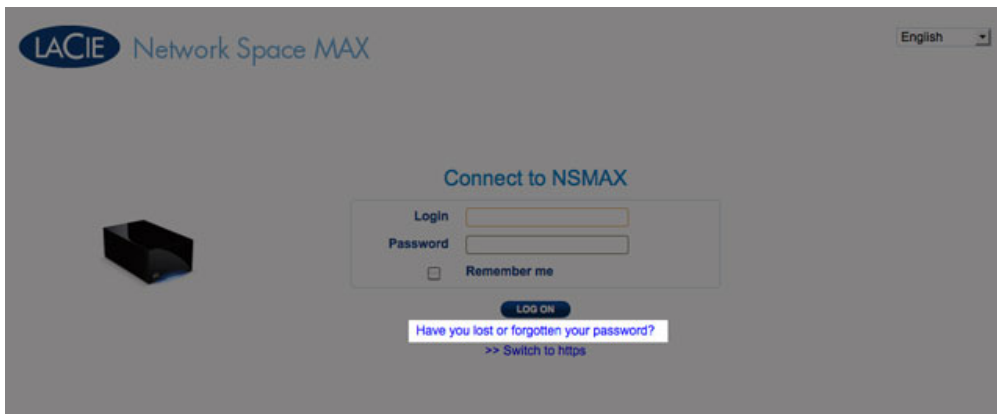

2. On the next page, type in the username. Then type the word you see in the image on the right (this ensures that the request is coming from a person) and click **SEND**.

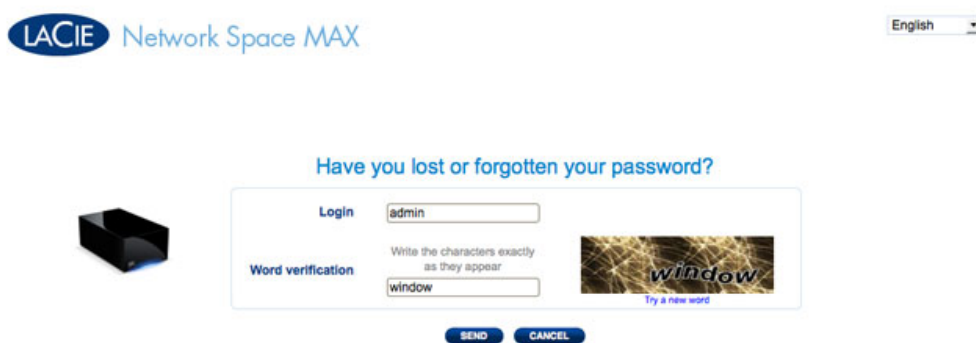

3. The message will arrive in the administrator's email inbox. In the email, click the **Click here** link.
4. In the **Reinitialize your password** screen, type your login, new password, then reconfirm the new password, then click **Send**.

Dashboard - First Logon

The first time you log onto your network storage, you will be asked:

- To enter a few initial settings, such as a login and password.
- To configure your LaCie MyNAS address. A MyNAS address allows you to access your network storage from a remote location with a connection to the Internet.

To begin, log onto your LaCie network storage via LaCie Network Assistant or enter the address manually in an Internet browser:

1. Complete the initial settings for your device:
 1. Language (upper right): Select your preferred language.
 2. Machine Name: You may keep the default name of your device or enter a new one.
 3. Administrator login: This field cannot be changed.
 4. Enter your password: Use a password that is easy for you to remember but difficult for others to guess. Strong passwords include a mix of capital and small letters with at least one number.
 5. Time settings: You can enter the time manually or use a NTP (network time protocol) server. You can test the NTP server by selecting the **TEST** button.
 6. Set the size of your USB storage (USBShare).

The screenshot shows the 'LaCIE Network Space 2' dashboard. In the top right corner, there is a language dropdown menu set to 'English'. The dashboard is divided into three main sections: 'General Settings', 'Time settings', and 'Disk configuration'. The 'General Settings' section includes fields for 'Machine Name' (NetworkSpace2), 'Administrator login' (admin), 'Enter your password' (with a checkmark and masked input), and 'Reenter your password' (with masked input). The 'Time settings' section includes a 'Timezone' dropdown (set to GMT+01:00), a 'Synchronize with the NTP server' checkbox (checked), an NTP server dropdown (set to pool.ntp.org), a 'TEST' button, and manual date and time inputs. The 'Disk configuration' section shows a progress bar for 'USB Storage' (0 B) and 'Network Storage' (929.1 GB), with a note that the maximum recommended size is 128GB. A blue 'FINISH' button is located at the bottom right of the dashboard.

English

General Settings

Machine Name: NetworkSpace2

Administrator login: admin

Enter your password: ☒

Reenter your password:

Time settings

Timezone: (GMT+01:00) Amsterdam, Berlin, Rome, Stockholm, Vienna

☒ Synchronize with the NTP server: pool.ntp.org **TEST**

Date: 2011-10-10 Time: 08:43

Disk configuration


USB Storage: 0 B

Network Storage: 929.1 GB


Accessible via USB. Max 128GB recommended for optimal performance. Accessible through the network.

FINISH

2. Select **FINISH**.
3. A window prompt will offer to configure remote access to your LaCie network storage. Click **Configure** to begin the quick setup.

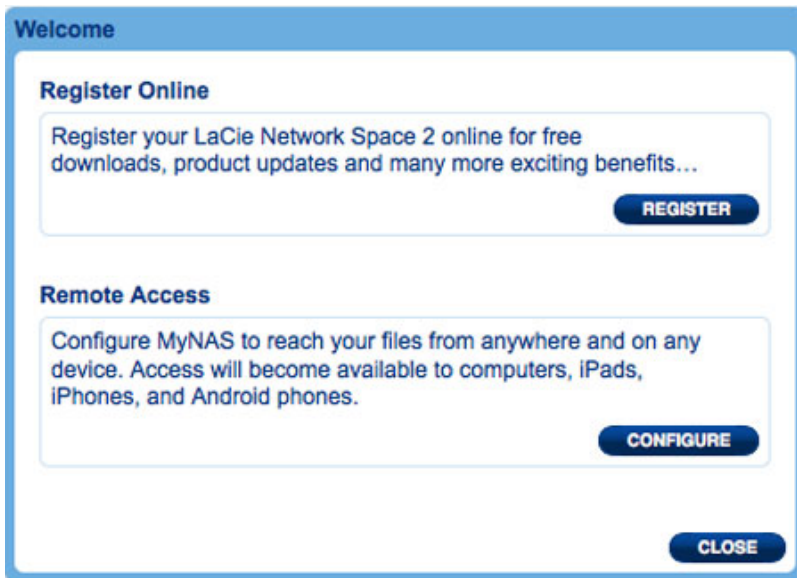

- The Dashboard Network page will open. In the Remote Access pulldown menu, select **MyNAS by LaCie**.

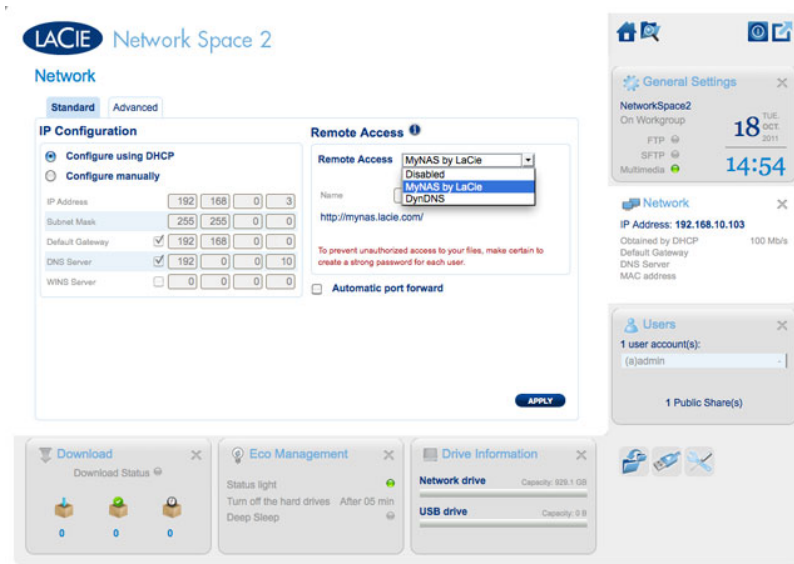

- Enter the name you would like to use for your MyNAS remote address. Since the address will always begin with <http://mynas.lacie.com>, LaCie recommends using a short name that is easy to remember.

Network

Standard
Advanced

IP Configuration

☒ Configure using DHCP
☐ Configure manually

| | | | | |
|-----------------|-------------------------------------|-----|-----|----|
| IP Address | 192 | 168 | 0 | 3 |
| Subnet Mask | 255 | 255 | 0 | 0 |
| Default Gateway | <input checked="" type="checkbox"/> | 192 | 168 | 0 |
| DNS Server | <input checked="" type="checkbox"/> | 192 | 0 | 10 |
| WINS Server | <input type="checkbox"/> | 0 | 0 | 0 |

Remote Access

Remote Access: MyNAS by LaCie

Name: Admin1967

http://mynas.lacie.com/admin1967

To prevent unauthorized access to your files, make certain to create a strong password for each user.

☐ Automatic port forward

APPLY

6. Click **APPLY**.

Your LaCie network storage and MyNAS address are ready for use. See [Remote Access](#) for more information on MyNAS.

DASHBOARD - WELCOME

The Welcome page contains links to helpful documents from the LaCie website, the ability to change details for the administrator, and a list of the different pages that make up the Dashboard.

My LaCie Account
Technical Support
Register Online

Eco Management

Users

Network

Copy

Support

General Settings

Drive Information

Download

Front USB port

General Settings

NetworkSpace2

On Workgroup

28

FTP

Multimedia

16:22

Network

IP Address: 192.168.10.83

Obtained by DHCP

Default Gateway

DNS Server

MAC address

Users

2 user account(s):

(a)admin

Jane

0%

2 Public Share(s)

Download

Download Status

0

Eco Management

Status light

Eco Mode after

Deep Sleep

05 min

Drive Information


Network drive

Capacity: 879.5 GB


USB drive

Capacity: 50 GB

Important info: Logging into the Dashboard with administrative credentials gives you full access to its features. Without administrative privileges, the only pages available to a user will be **Welcome, Copy, User,** and **General Settings**.

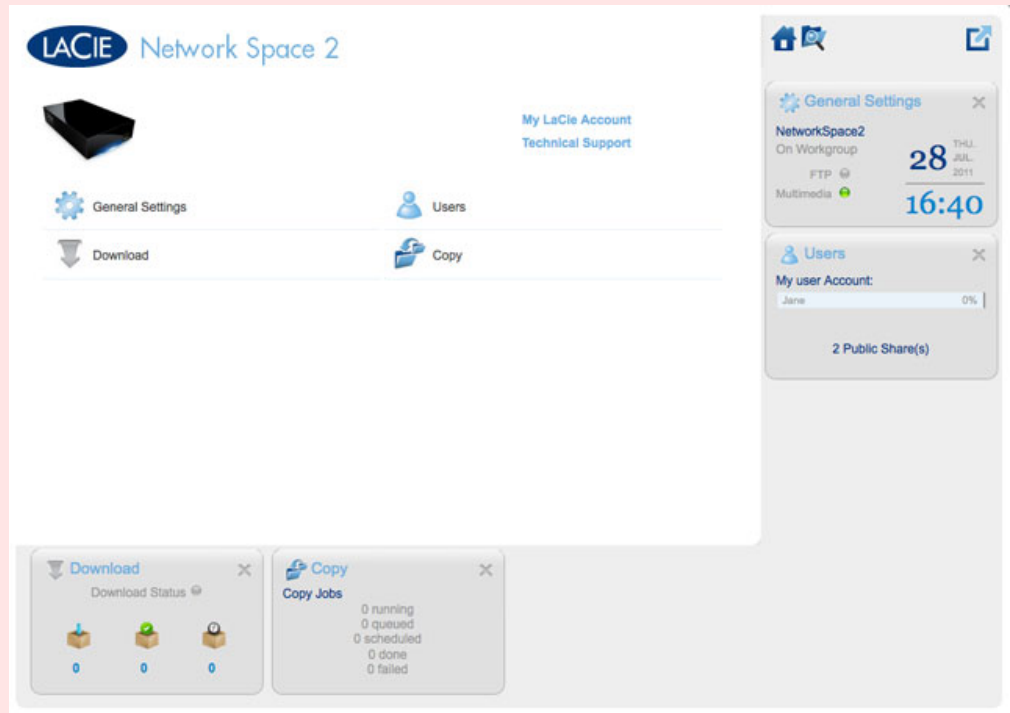


Support and Online Registration

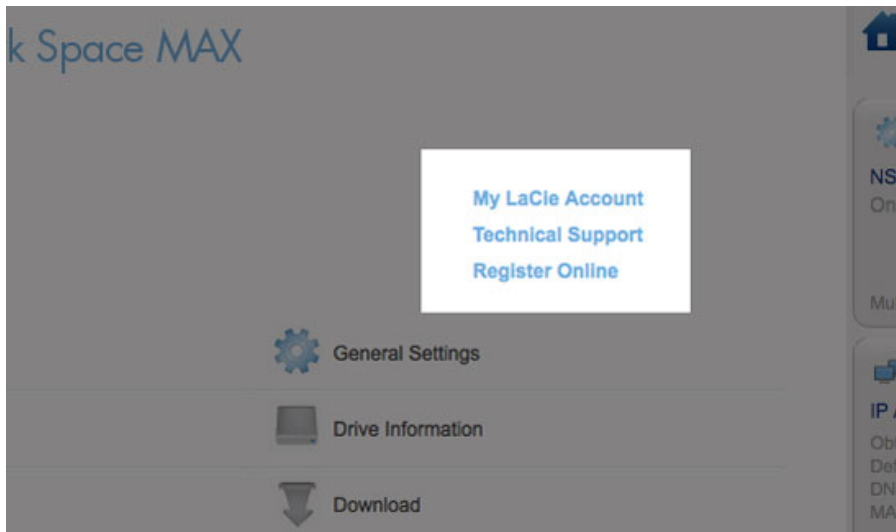

- To log into your account with www.lacie.com, click on **My LaCie Account**.
- For product updates, software downloads, and important support information from LaCie, click **Technical Support**. You will be directed to the LaCie online **Support & Downloads** page.
- If you have not created a personal account at www.lacie.com, click **Register Online** to receive the latest information on your device as well as updates on other LaCie products.


Deep Sleep Mode, Restart, or Shut Down

To **Shut Down**, **Restart**, or put the network storage device into **Deep Sleep Mode**, click on the power button in the upper right of the Dashboard window. Since it is not available by default, Deep Sleep Mode must be enabled by the administrator (see [Dashboard - Eco Management](#)).

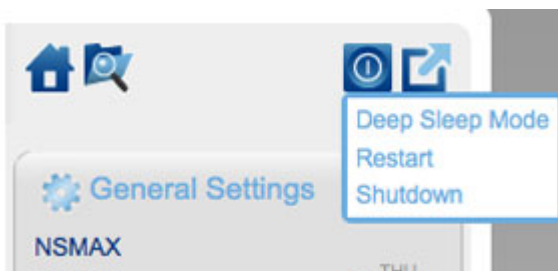


Log Out

To log out of the Dashboard, click the **Log Out** button in the upper right of the Dashboard window. For security reasons, LaCie recommends logging out of the Dashboard if it is no longer needed.

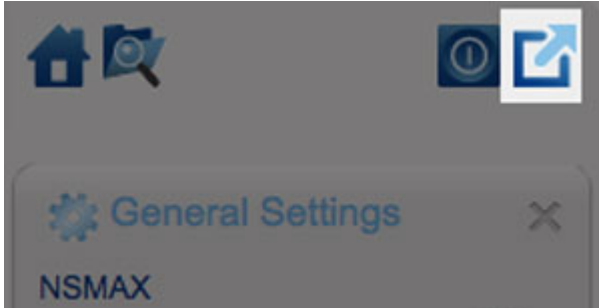

File Browser

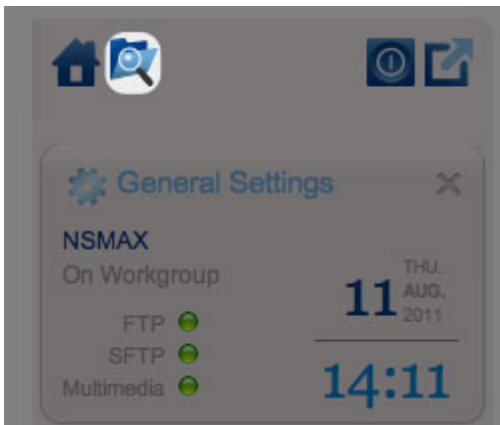

File Browser icon

See [Dashboard - File Browser](#).

DASHBOARD - NAVIGATION

The Dashboard is made up of a central area surrounded by widgets, or small boxes that represent the different pages. The widget displays a summary of the information contained in the page. For full details, navigate to the page itself.

- To **navigate to a page**, click the widget below its title; or, drag and drop a widget to the center of the window.
- To **minimize a widget**, click the **X** next to its title.
- To **expand a minimized widget**, drag its icon over an expanded widget or to an open widget space.
- To **rearrange widgets**, drag the minimized widget icon or the expanded widget's heading onto the place of another widget.

DASHBOARD - USERS

LACIE Network Space MAX

Users

User Accounts

ADD USER

| Login | Password | Email | Usage | Quota (GB) | Time Machine™ | |
|-------|----------|-----------------|-------|------------|---------------|---|
| John | ***** | john@email.com | 4% | 5 | No | ✕ |
| Sally | ***** | sally@email.com | 56% | 5 | Yes | ✕ |
| admin | ***** | admin@email.com | - | No limit | Yes | |

Public Share

| Name | Description | Usage | Quota (GB) | Time Machine™ | |
|-----------|-------------|-------|------------|---------------|--|
| OpenShare | | - | No limit | Yes | |
| USBShare | | - | No limit | Yes | |

General Settings

NSMAX
On Workgroup
29
FRI JUL 2011
12:17
FTP @
SFTP @
Multimedia @

Network

IP Address: 192.168.10.98
Obtained by DHCP
Default Gateway
DNS Server
MAC address
100 Mbit/s

Users

3 user account(s):
(s)admin
Sally 56%

2 Public Share(s)

Download

Download Status
0 0 0

Eco Management

Status light
Turn off the hard drives After 05 min
Deep Sleep

Drive Information

Network drive Capacity: 1.8 TB
USB drive Capacity: 12.6 MB

This page allows you to manage user accounts.

New User

To create a new user, click the **ADD USER** button, then fill out the required fields.

LACIE Network Space MAX

Users

User Accounts

ADD USER

| Login | Password | Email | Usage | Quota (GB) | Time Machine™ | |
|-------|----------|----------------|-------|------------|---------------|---|
| John | ***** | john@email.com | 4% | 5 | No | ✕ |

General Settings

NSMAX
On Workgroup
29
FRI JUL 2011
12:17
FTP @
SFTP @
Multimedia @

Network

IP Address: 192.168.10.98
Obtained by DHCP
Default Gateway
DNS Server
MAC address
100 Mbit/s

Users

3 user account(s):
(s)admin
Sally 56%

2 Public Share(s)

Download

Download Status
0 0 0

Eco Management

Status light
Turn off the hard drives After 05 min
Deep Sleep

Drive Information

Network drive Capacity: 1.8 TB
USB drive Capacity: 12.6 MB

LACIE Network Space MAX

Users

User Accounts

ADD USER

| Login | Password | Reenter password | Email | Quota (GB) | |
|-------|----------|------------------|-----------------|------------|-----|
| Sally | **** | **** | sally@email.com | 5 | ✓ ✕ |

| Login | Password | Email | Usage | Quota (GB) | Time Machine™ | |
|-------|----------|-------|-------|------------|---------------|---|
| John | ***** | | - | No limit | Yes | ✕ |
| admin | ***** | | - | No limit | Yes | |

Important info:

The password is case-sensitive.

In text fields, you may enter 1 to 20 characters using letters, numbers, symbols, hyphen, and underscore. Do not begin or end with a hyphen or underscore.

Existing User

User data is organized in a table:

Users

User Accounts

ADD USER

| Login | Password | Email | Usage | Quota (GB) | Time Machine™ | |
|-------|----------|----------------|-------|------------|---------------|---|
| John | ***** | john@email.com | 4% | 5 | No | ✕ |

- Click the text in the **Login** column to change the user name.
- Click the text in the **Password** column to change the user's password.
- Click the text in the **Email** column to change the user's email address.
- Click the text in the **Quota** column to assign the storage capacity available to the user.

User Accounts

ADD USER

| Login | Password | Email | Usage | Quota (GB) | Time Machine™ | |
|-------|----------|----------------|-------|------------|---------------|---|
| John | ***** | john@email.com | 4% | 5 | No | ✕ |

- Click the text in the **Time Machine** column to turn the option on or off. Choose **Yes** if the user's computer runs Mac OS X and expects to back up to the share.

Delete a User

To delete a user, click the gray **X** on the far right of the user's row. A pop-up window will ask for confirmation. By clicking **APPLY**, you will delete the user's share and all of his data.

Delete User John

Data, Share(s) and Copy job(s) associated with the user will also be deleted.


CANCEL

APPLY

Note: The admin does not have an **X** since the account cannot be deleted.

| | | | | | | |
|-------|-------|-----------------|-----|----------|-----|---|
| John | ***** | john@email.com | 4% | 5 | No | ✕ |
| Sally | ***** | sally@email.com | 56% | 5 | Yes | ✕ |
| admin | ***** | admin@email.com | - | No limit | Yes | |

DASHBOARD - DRIVE INFORMATION

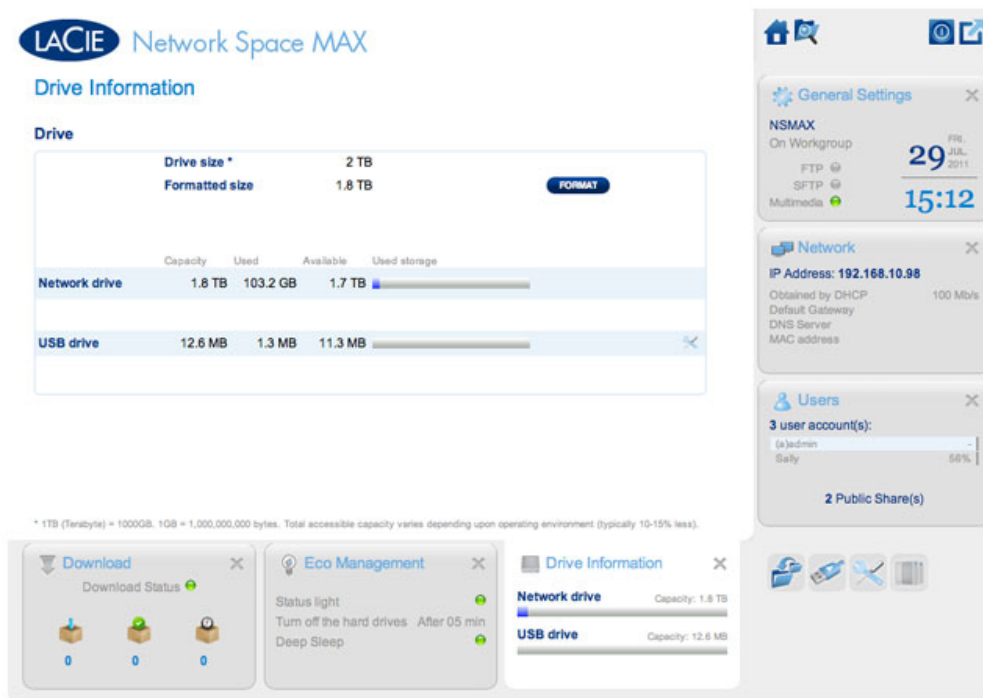

This page shows you information about disk usage and will allow you to reformat the Network drive or the USB drive (USBShare).


Network Drive

When you click the top **FORMAT** button, ALL data on the disk(s) (including USBShare and User Shares) will be erased and the disk(s) will be formatted. Data on any USB Key or hard drive connected to the front expansion port will not be affected.


Caution: Formatting will erase all the data on your drive (but will not remove users or settings). Make sure to back up all your data onto another volume before proceeding. LaCie cannot be held responsible for the loss of data occurring during formatting.

To reformat the Network Drive:

1. Click the **FORMAT** button.

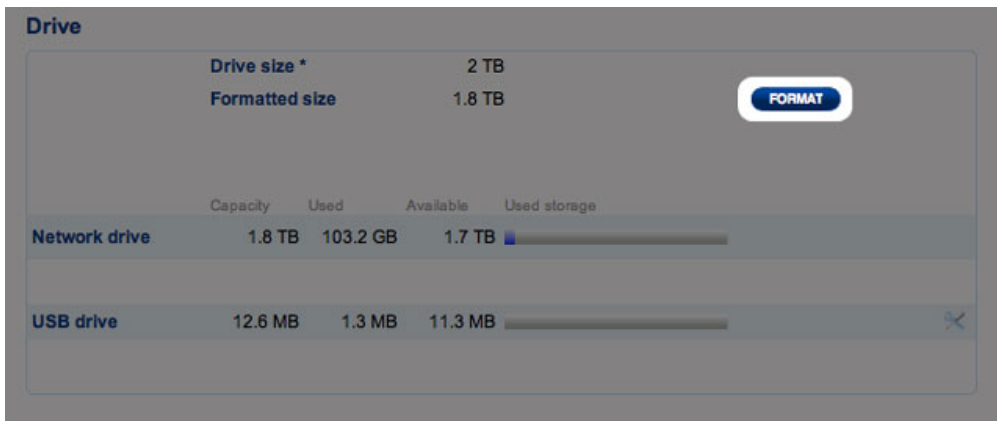

2. In the blue window that opens, confirm by clicking the **FORMAT** button.

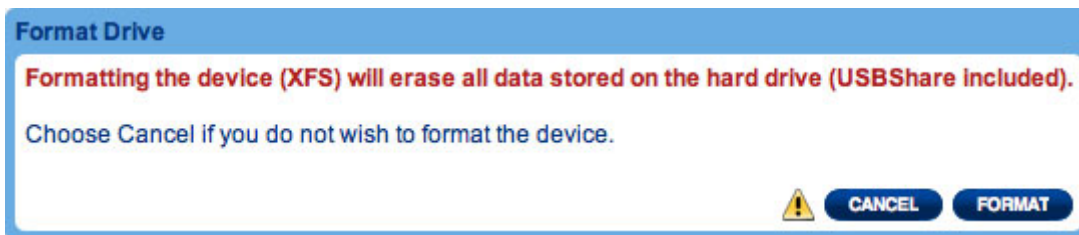

USB Drive (USBShare)

See [Connect to a Computer via USB](#) for details on connecting your LaCie network storage to a computer via the rear USB device port.


On this page, you can:

- Increase or decrease the storage capacity allocated to the USB Drive
- Format the USB Drive


Caution: Formatting and resizing the USBShare will erase all the data on this volume. Make sure to back up all your data onto another volume before proceeding. LaCie recommends you use the File Browser (see [Dashboard - File Browser](#)) instead of using desktop copy. LaCie cannot be held responsible for the loss of data occurring during formatting.

To change the storage allocated to USBShare:

1. Click the configuration icon (the intertwined wrench and screwdriver) in the USB drive row

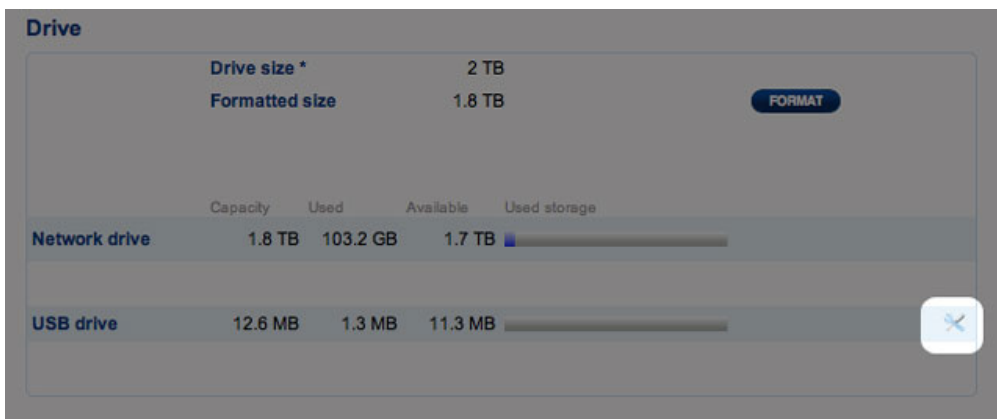

2. From the selection window, choose **Resize the USBShare**

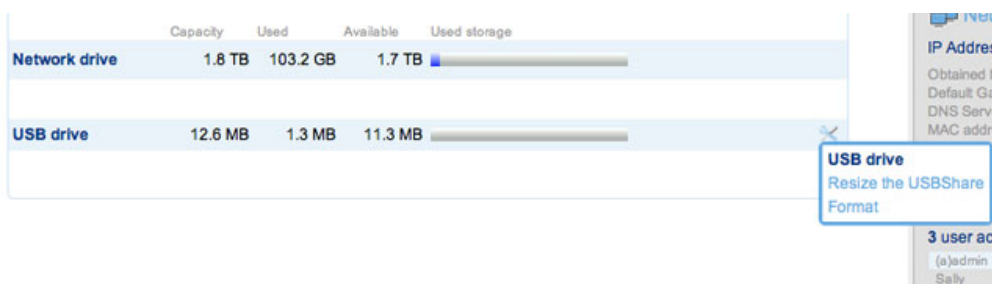

3. Drag the slider to the right (increase capacity up to the maximum 500GB) or to the left (decrease capacity). Once you click on the slider, you can also use the right or left arrow keys on your keyboard to fine-tune the capacity.

Resize the USBShare

USB Storage **Network Storage (free space)**

70 GB 1.6 TB

Accessible via USB. Accessible through the network

Max 128GB recommended for optimal performance.

CANCEL **APPLY**

Increase USBShare Storage Capacity

Resize the USBShare

USB Storage **Network Storage (free space)**

0 B 1.7 TB

Accessible via USB. Accessible through the network

Max 128GB recommended for optimal performance.

CANCEL **APPLY**

Decrease USBShare Storage Capacity

4. Once you have selected the capacity, click **Apply**.
5. A warning will ask you to confirm the change in capacity. Doing so will delete all the data on the USBShare. However, data stored on other volumes (i.e. MyShare, OpenShare, User Share) will remain intact.

WARNING

All your data will be lost. Backup all your data before applying this change.

CANCEL **APPLY**

Resize the USBShare

USB Storage **Network Storage (free space)**

70 GB 1.6 TB

Accessible via USB. Accessible through the network

Max 128GB recommended for optimal performance.

CANCEL **APPLY**

6. Click **APPLY** to confirm the change in USBShare storage capacity

To format the USBShare:

1.

C
l
i
c
k
t
h
e
w
r
e
n
c
h
a
n
d
s
c
r
e
w
d
r
i
v
e
r
i
c
o
n
i
n
t
h
e
U
S
B
d
r
i
v
e
r
o



W

2.

F
r
o
m
t
h
e
s
e
l
e
c
t
i
o
n
w
i
n
d
o
w
, w
c
h
o
o
s
e **F
o
r
m
a
t**



3.

A
w
a
r
n
i
n
g
w
i
l


I
a
s
k
y
o
u
t
o
c
o
n
f
i
r
m
t
h
e
s
h
a
r
e
f
o
r
m
a
t
.
D
o
i
n
g
s
o
w
i
l
l
d
e
l
e
t
e
a
l
l

t
h
e
d
a
t
a
o
n
t
h
e
U
S
B
S
h
a
r
e
. H
o
w
e
v
e
r
, d
a
t
a
s
t
o
r
e
d
o
n
o
t
h
e
r
v
o
l
u
m
e

s
(
. i
. e
M
y
S
h
a
r
e
, e
O
p
e
n
S
h
a
r
e
, e
U
s
e
r
S
h
a
r
e
) e
w
i
l
l
r
e
m
a
i
n
i
n
t
a
c
t
.
4.
C
l
i

c
k
F
O
R
M
A
T
t
o
c
o
n
t
i
n
u
e


DASHBOARD - DOWNLOAD

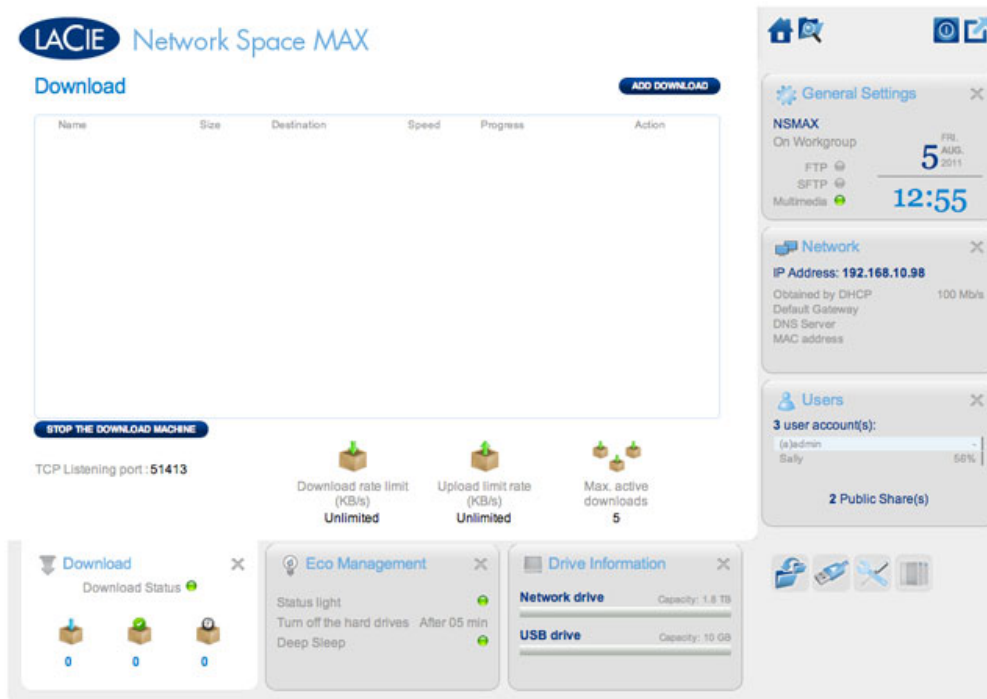



The Dashboard features a torrent server that will allow you to download torrent files. For more information on torrents, see:

http://en.wikipedia.org/wiki/BitTorrent_protocol

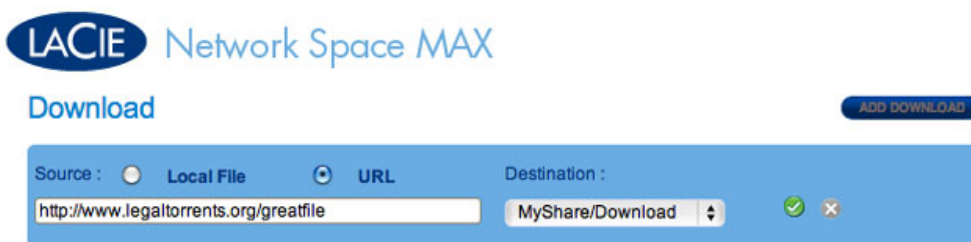1. Click the **Start Download Machine** button on the lower left of the window.
2. To start a download, click the **Add Download** button.




3. Choose whether the torrent source is a file or a URL, then navigate to the source.
4. Choose the destination (i.e., on which share the downloaded file will be stored) and click the green check mark.
5. The file will begin downloading. It may take a few minutes to start the download.

| Name | Size | Destination | Speed | Progress | Action |
|---|-------|-----------------|-------|-----------------------------|---|
|  greatfile | 20 KB | MyShare/Down... | 0 B/s | <div><div></div></div> 100% |  |


Download Page Settings

STOP THE DOWNLOAD MACHINE


TCP Listening port : **51413**



Download rate limit
(KB/s)
Unlimited



Upload limit rate
(KB/s)
Unlimited




Max. active
downloads
5

Below the list of downloads are several settings.

- **TCP Listening port:** Click the number to choose a router port through which the torrent service will operate.
- **Download rate limit:** Click the number here to type a maximum download speed.
- **Upload limit rate:** Click the number here to type a maximum upload speed.
- **Max. active downloads:** Click the number here to limit the number of torrents that can download/upload simultaneously. Type zero for no limit.

Technical note: Because the torrent client service uses bandwidth and system resources, multiple simultaneous downloads can impact your LaCie network storage performance. Further, even after a download has completed it may still be active (i.e. uploading), which will continue to use system resources.


DASHBOARD - GENERAL SETTINGS

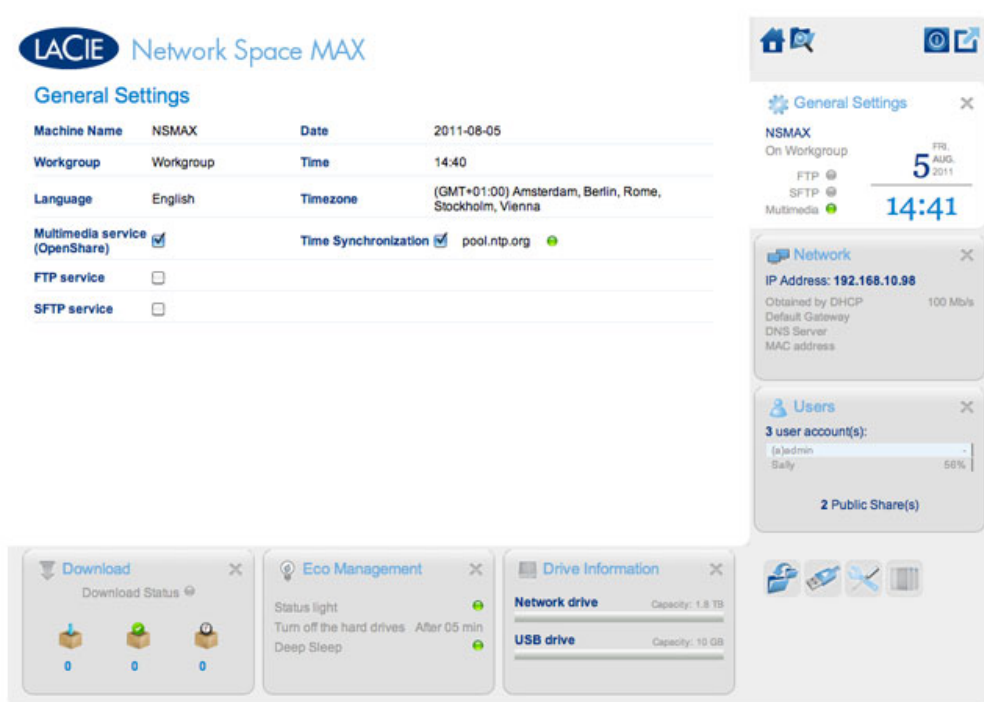

- **Machine Name:** The machine name identifies your LaCie storage device on your network. You can change it from the default by clicking on the text and typing a new one. Keep in mind that the machine name: is limited to 15 characters, is case-sensitive, and can consist only of alphanumeric characters without spaces or symbols.
- **Workgroup:** Click the text, then type a Windows workgroup name (use from 1 to 15 alphanumeric characters).
- **Language:** Click the text to change the Dashboard language.
- **Multimedia service (OpenShare):** Multimedia service allows you to stream media files from your LaCie network storage to UPnP-enabled players (such as cell phones, computers, and game consoles). Media files must be stored on OpenShare to be played.
- **FTP service:** Standard network protocol used to copy files from one host to another over a TCP-based network.
- **SFTP service:** SSH File Transfer Protocol. While this offers a more secure FTP service, transfer rates will be slower due to encryption.
- **Date:** The date and time are set automatically if you assign an NTP server (see below). If not, click the text and select a day from the calendar.
- **Time:** If the time is not set by the NTP server, click the text and select the proper time.
- **Timezone:** Select your timezone from the drop down window.
- **Time Synchronization:** This option allows your network storage to sync the time and date with an NTP (network time protocol) server. Setting the time automatically will avoid the need to adjust the time settings for daylight savings.

DASHBOARD - SUPPORT

Configuration

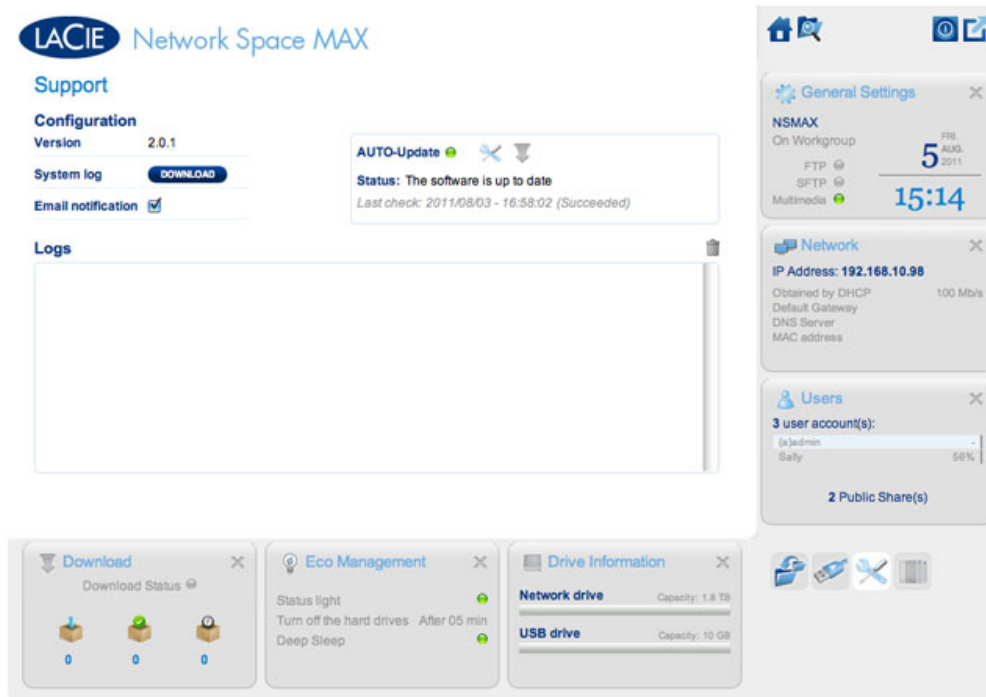

- **Version:** The LaCie NAS OS version used by your network storage device. This information can be important when updating the OS or speaking with LaCie technical support.
- **System Log:** Click the **Download** button to save the system log to your computer. The log may be useful if you are troubleshooting with LaCie technical support.
- **Email notification:** By default, the checkbox is selected. Note that an SMTP server must be defined and the administrator must have added an email address on the Users page.

Email Notification Triggers

The following events will trigger an email notification if an email address has been provided in the User page:

| Event Identifier | Description | Recipient |
|-------------------|---|--|
| Capacity | When the total available capacity is less than 90% | Admin |
| Quota event | When capacity reaches 90% of the amount set by the quota | Admin |
| Download | When a download has completed or when a download error has occurred | Admin |
| Backup | When a backup begins, ends, is cancelled, or fails | Admin |
| Temperature | The product has remained at maximum temperature for at least one minute | Admin |
| Password recovery | A user has recovered his/her password | Admin or user, depending on who made the request |

AUTO-Update


By default, your LaCie network storage will search for updates to its operating system on a weekly basis. If an update is found, the system will install it for you. See [Update Product Operating System](#) for details on adjusting the update settings.

Logs

The Logs section will list important events, such as warnings and RAID change results (RAID is only available on the Network Space MAX).

To purge the text from the list, click the **Trash** icon.

DASHBOARD - BACKUP

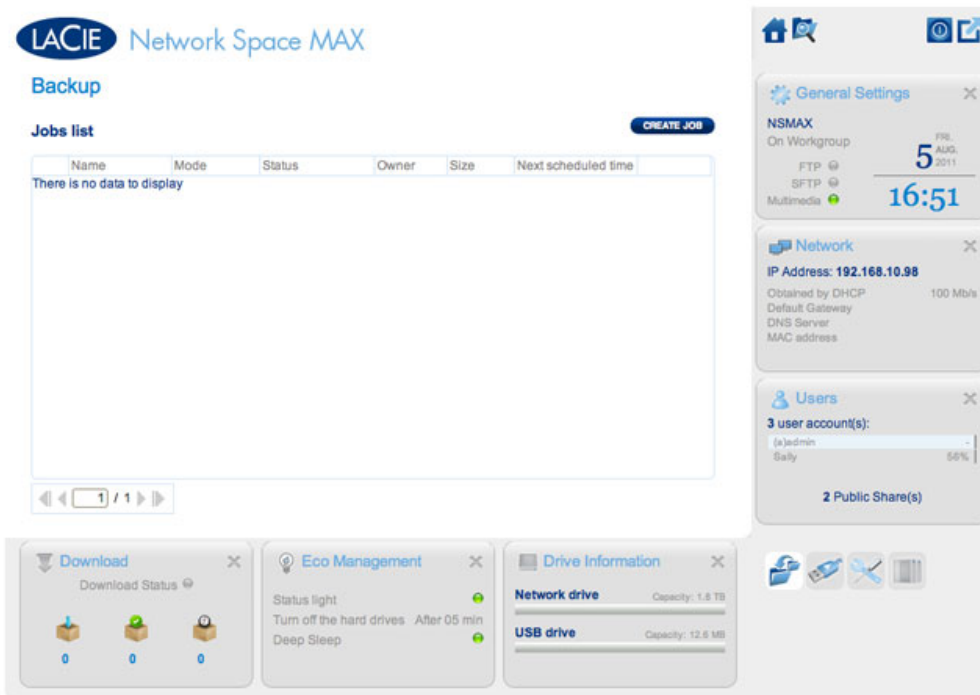

Your LaCie network storage features a robust backup and restore system that allows you to back up files:

- From your LaCie network storage to an external hard drive connected to the front USB port
- From an external hard drive connected to the front USB port to the LaCie network storage
- Between shares on the network storage (i.e. from OpenShare to MyShare, MyShare to USBShare, etc.)

Examples:

Backup: To secure the family media and other important files, you wish to backup the contents of your LaCie network storage onto an external USB hard drive. Once the external hard drive is plugged into the front USB expansion port, you can use the Backup page to schedule the frequency and type of backup. Backups are flexible, allowing you to choose every day, once a week, or once a month.

Restore: Someone in the household accidentally deleted a critical term paper from his LaCie network storage share. Thankfully, you have backed up the network storage every night onto an external hard drive. Once the external hard drive is plugged into the front USB expansion port, you can go to the Backup page to restore the missing document.


The **Backup & Restore Wizard** will help you set up backup jobs and to restore files that may have been deleted or lost. The system saves up to 10 versions of backups, giving you the flexibility to restore earlier versions of files.

To begin:

1. Choose the **Backup** page in the Dashboard
2. Click the **CREATE JOB** button




3. Choose between **Backup** and **Restore**

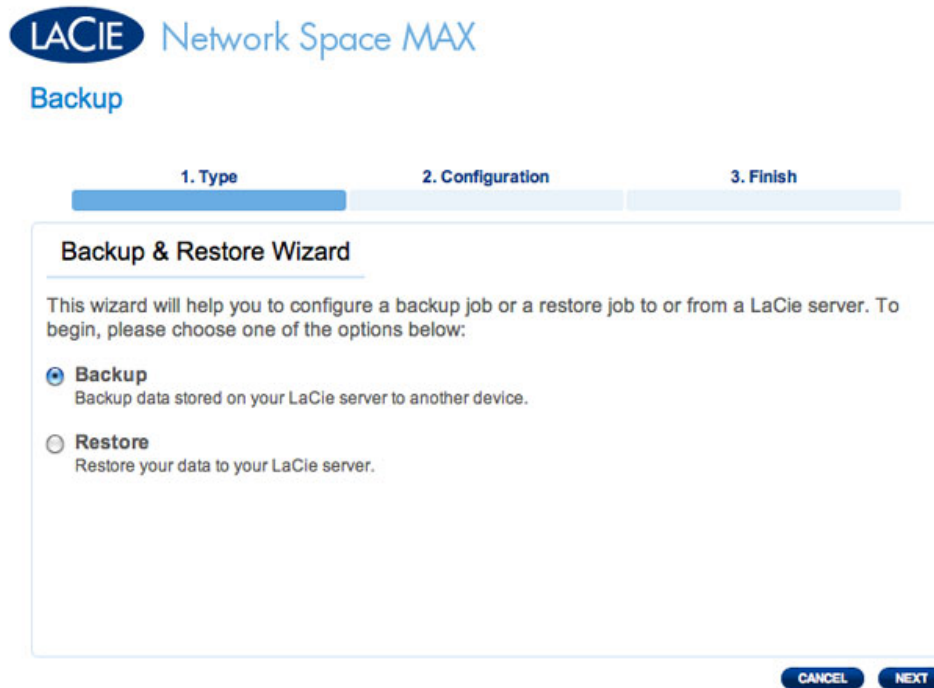


4. Follow the directions below

Backup



1. Select **Backup**, then click **NEXT**.

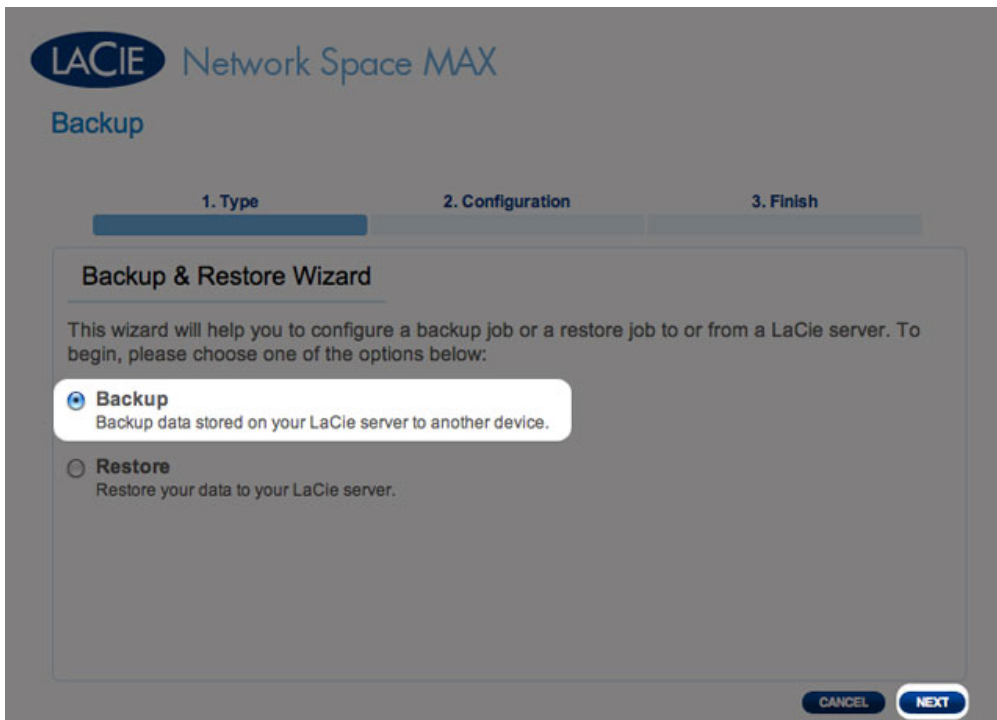


2. In the next screen, choose one or multiple sources (i.e., what will be backed up) in the left-hand column. Then choose a destination (i.e., where the files will be backed up) in the right-hand column.

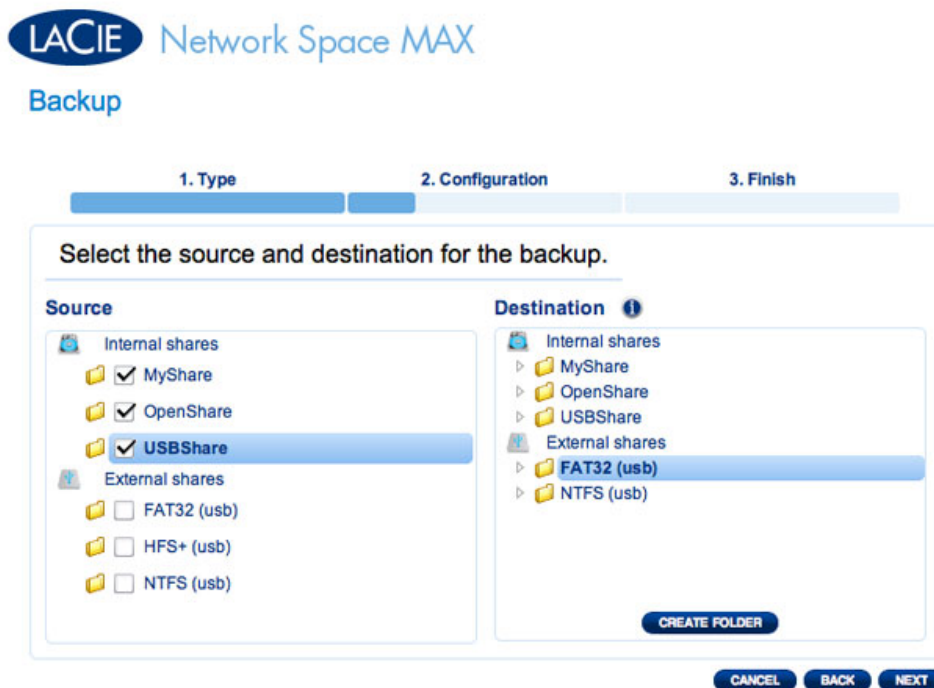

3. To create a new folder, navigate to an ideal location on the destination volume then click the **CREATE FOLDER** button. Note that shares or folders to which you do not have write access will not be listed. For example, volumes that are formatted in HFS+ (Mac) can be read but not written to.

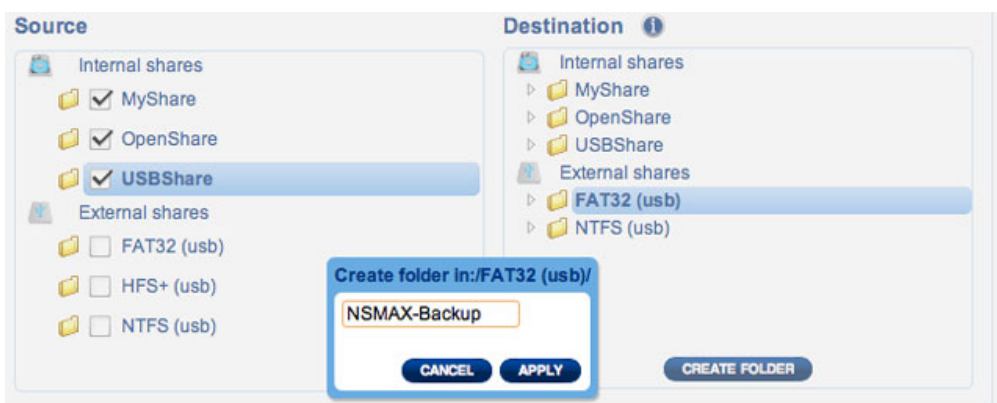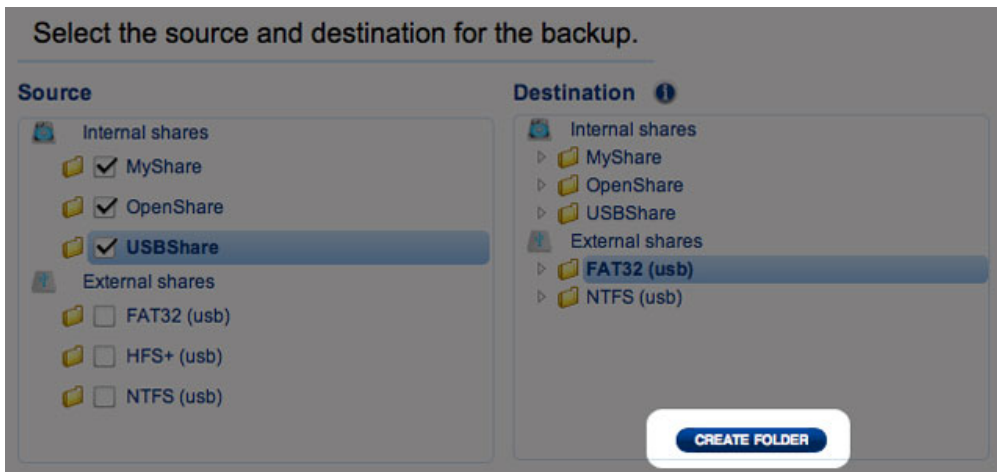

Backup

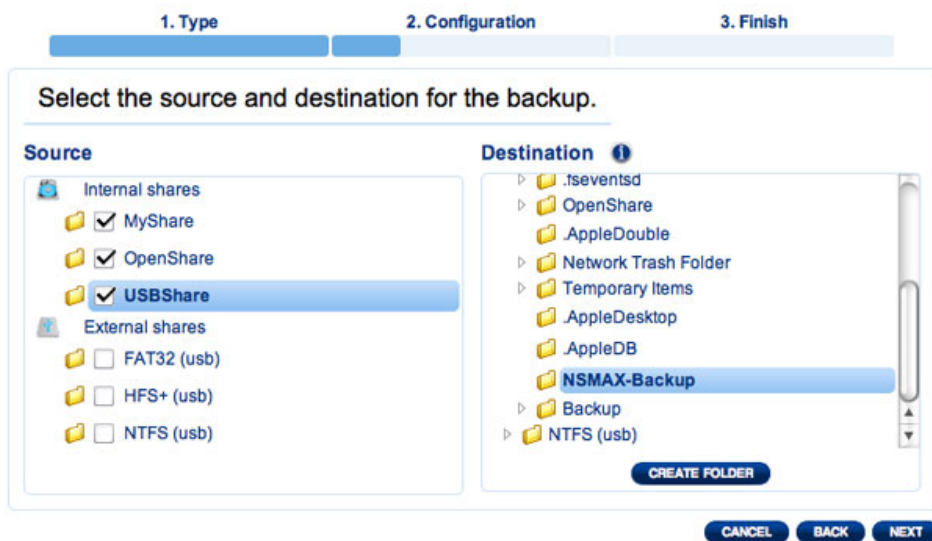

- Click **NEXT**.
- Select a backup mode, then click **NEXT**.

Backup

1. Type

2. Configuration

3. Finish

Select a Backup mode

☐ **Manual**
 Create and initiate backups as needed.

☒ **Scheduled**
 Schedule an automated backup: daily, weekly, monthly, or custom.

☐ **Automatic**
 A backup will begin each time the destination is detected. For example, the backup destination is an external disk called USB_1. The backup will begin as soon as USB_1 is connected.

CANCEL

BACK

NEXT

- **Manual** means that the backup job will only run when you execute it.
 - **Scheduled** means that the backup job will run according to a schedule you set.
 - **Automatic** means that the backup job will run automatically when both the backup source and destination are available. This option is only available if one of the devices (*Source* or *Destination*) is an external hard drive. Once Automatic is selected, you will have the option to select **Auto eject** to unmount the external hard drive once the backup has completed.
6. If you selected **Scheduled** as a backup mode, another window will ask you to choose a frequency and a time before clicking **NEXT**.

Choose the backup schedule

☒ Daily
 ☐ Weekly
 ☐ Monthly

Backup time:

08

00

CANCEL

BACK

NEXT

7. Type a name for the backup job then click **NEXT**.

Backup

1. Type

2. Configuration

3. Finish

Choose a backup name

Name your backup job:

CANCEL

BACK

NEXT

8. The next screen will display a summary for the backup job. You will have the option to begin the backup by checking the box next to **Start the backup immediately**. Click **FINISH**.

Backup

1. Type

2. Configuration

3. Finish

Backup summary

Please review your backup settings. Click FINISH to confirm and save the settings.

| | |
|---------------------------|------------------------------------|
| Job | Important Files |
| Backup Type | Full |
| Backup Mode | Scheduled |
| Shared folders to back up | /MyShare/, /OpenShare/, /USBShare/ |
| Destination | /FAT32 (usb)/NSMAX-Backup |
| Backup Schedule | Daily, at 08:00 |

☒ **Start the backup immediately.**
Check this box to begin the backup after you click FINISH.

CANCEL

BACK




FINISH

9. The backup will be added to the **Jobs list**.

Backup

Jobs list

CREATE JOB

| | Name | Mode | Status | Owner | Size | Next scheduled time | |
|---|-----------------|-----------|----------------------|-------|----------|---------------------|---|
|  | Important Files | Scheduled | Done | admin | 125.6 MB | 2011-08-09 08:00 |   |

Restore

1. Select **Restore**, then click **NEXT**.

The screenshot shows the 'Backup & Restore Wizard' in the LACIE Network Space MAX interface. The wizard is titled 'Backup' and has three steps: 1. Type, 2. Configuration, and 3. Finish. The 'Type' step is currently active. The wizard explains that it will help configure a backup or restore job. Two options are presented: 'Backup' (selected with a radio button) and 'Restore' (selected with a radio button). The 'Restore' option is highlighted with a blue border and contains the text 'Restore your data to your LaCie server.' At the bottom right, there are 'CANCEL' and 'NEXT' buttons.

2. Select a restore type, either from an existing backup job, or from a backup folder. Click **NEXT**.

The screenshot shows the 'Select a restore type' screen in the LACIE Network Space MAX interface. The wizard is titled 'Backup' and has three steps: 1. Type, 2. Configuration, and 3. Finish. The 'Configuration' step is currently active. The screen prompts the user to 'Select a backup job to restore or restore data from a storage volume'. Two options are presented: 'Select an existing backup job:' (selected with a radio button) and 'Restore data from a backup folder' (selected with a radio button). The 'Select an existing backup job:' option has a dropdown menu showing 'Important Files'. At the bottom right, there are 'CANCEL', 'BACK', and 'NEXT' buttons.

- If you chose to restore from an existing backup job, information about that job will be listed in the next screen for your confirmation. Click **NEXT**.

Backup

1. Type
2. Configuration
3. Finish

Backup information

Details from the selected backup.

| Job | Important Files |
|---------------------------|---------------------------------|
| Backup Type | Full |
| Shared folders to back up | /MyShare, /OpenShare, /USBShare |
| Destination | /FAT32 (usb)/NSMAX-Backup |

CANCEL
BACK
NEXT

- If you chose to restore data from a backup folder, the next screen will allow you to select the source from which you want to restore the data. Valid backups will have a red folder icon. Choose the backup directory, then click **NEXT**. Information about that backup source will be listed in the next screen for your confirmation. Click **NEXT**.

Select the source data to restore


- Internal shares
 - MyShare
 - OpenShare
 - USBShare
- External shares
 - FAT32 (usb)
 - HFS+ (usb)
 - NTFS (usb)

CANCEL
BACK
NEXT

Browse to the Source data location



A valid Backup to Restore will appear as red

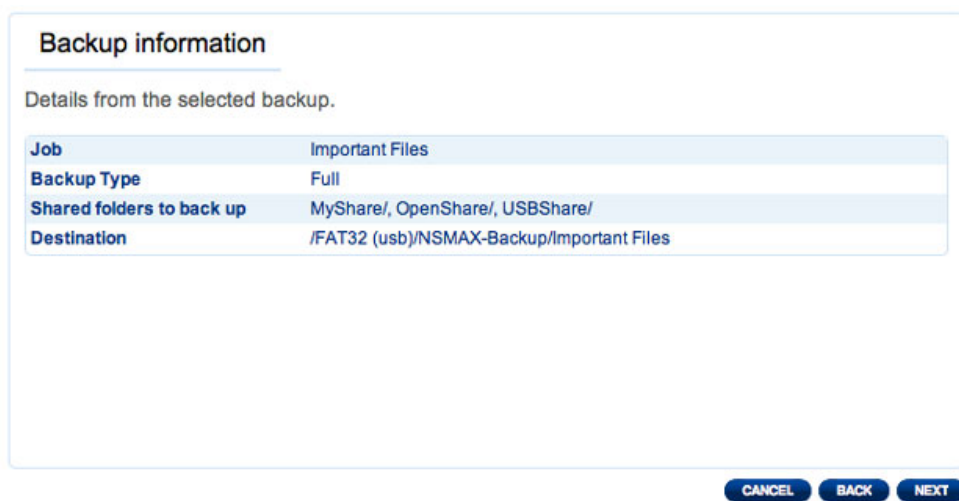

Summary of the Backup that will be Restored

3. In the next screen, choose a restore point. A restore point corresponds to a version of the directory for each time it was backup up. Choose to either restore the directory from the last backup, or by date. If you choose by date, select the date in the calendar, and the time from the drop-down menu. Then click **NEXT**.

Backup

1. Type
2. Configuration
3. Finish

Select a restore point

☒ Last backup (2011-08-08 12:53)

☐ Restore points by date

Select the restore point date

| 2011 Aug | | | | | | |
|----------|----|----|----|----|----|----|
| M | T | W | T | F | S | S |
| 25 | 26 | 27 | 28 | 29 | 30 | 31 |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| 15 | 16 | 17 | 18 | 19 | 20 | 21 |
| 22 | 23 | 24 | 25 | 26 | 27 | 28 |
| 29 | 30 | 31 | 1 | 2 | 3 | 4 |

Select the restore point time

CANCEL
BACK
NEXT

Backup

1. Type
2. Configuration
3. Finish

Select a restore point

☐ Last backup (2011-08-08 12:53)

☒ Restore points by date

Select the restore point date


| 2011 Aug | | | | | | |
|----------|----|----|----|----|----|----|
| M | T | W | T | F | S | S |
| 25 | 26 | 27 | 28 | 29 | 30 | 31 |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 |
| 15 | 16 | 17 | 18 | 19 | 20 | 21 |
| 22 | 23 | 24 | 25 | 26 | 27 | 28 |
| 29 | 30 | 31 | 1 | 2 | 3 | 4 |

Select the restore point time


12:53

CANCEL
BACK
NEXT

4. In the next screen, choose where to restore the backup.
 - Restore to the initial location of the data, which will save over the source folder with the backed up folder. This gives priority to the backup and will replace the source folder contents.
 - If you want to restore the backup to a specific folder, click this option, then click the **BROWSE** button. Navigate to the destination, then click **APPLY**.

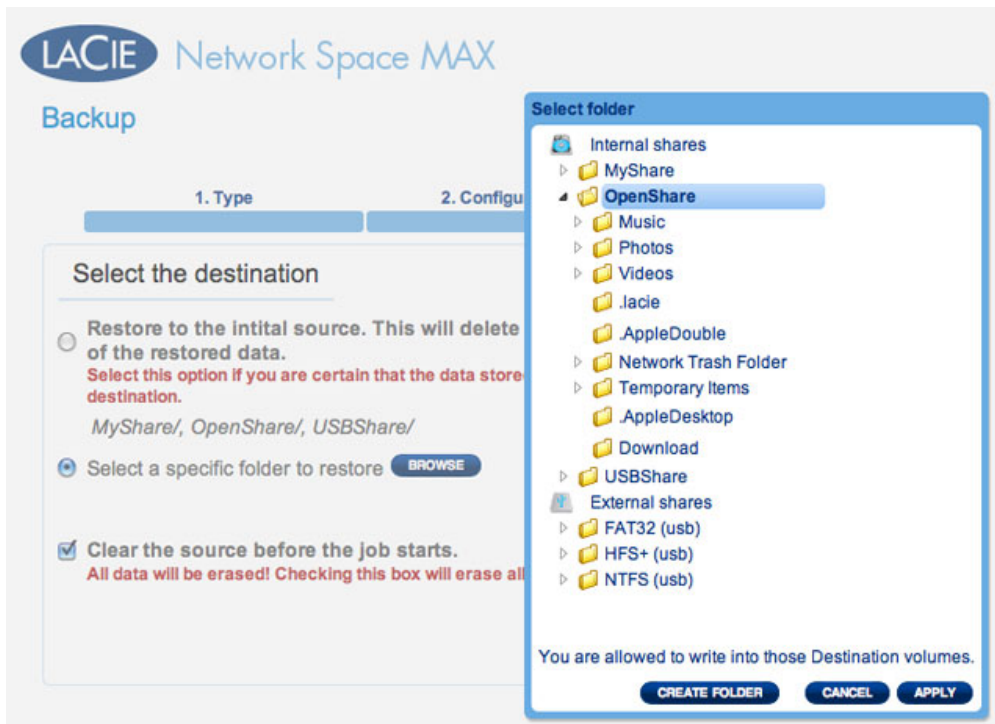

- To free disk space, you can choose to clear the source before the job starts. By checking the box in this step, all data will be erased in the source directory. Before continuing to the next step, a prompt will ask you to acknowledge that all data will be erased in the source before the restore begins.

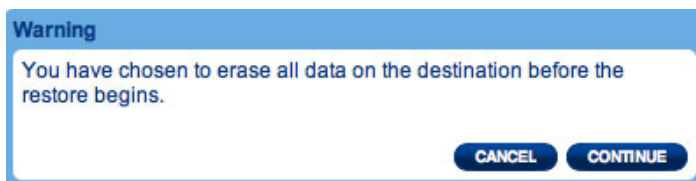

5. In the next screen, name the restore job, then click **NEXT**.



6. The next screen will display a summary for the restore job. Click **FINISH** to add the job.

Backup

1. Type

2. Configuration

3. Finish

Restore summary

Please review your restore settings before selecting FINISH to save them.

| | |
|--------------------------|---|
| Job | Restore NSMAX |
| Source | /FAT32 (usb)/NSMAX-Backup/Important Files |
| Destination | Same as origin |
| Restoration date | 2011-08-08 12:53 |
| Erase destination before | Yes |

CANCEL

BACK

FINISH

Modifying Existing Jobs

Jobs you have created will be listed in the table on the Backup page. This table will display useful information that will help you to manage the jobs. Click the configuration (intertwined screwdriver and wrench) icon in the far-right column for options. You can get detailed information on a job, start it, delete it, or enable/disable it. If you disable a scheduled job, it will not run until it is enabled.

Backup

Jobs list

CREATE JOB

| Name | Mode | Status | Owner | Size | Next scheduled time | |
|--------------------|-----------|----------------------|-------|----------|---------------------|--|
| Important Files | Scheduled | Done | admin | 125.6 MB | 2011-08-09 08:00 | |
| Restore Existin... | - | Done | admin | 125.6 MB | - | |
| Restore NSMAX | - | Done | admin | 125.6 MB | - | |

Important Files

Information

Start job

Delete

Disable

Modify a Backup Job

Backup

Jobs list

CREATE JOB

| Name | Mode | Status | Owner | Size | Next scheduled time | |
|--------------------|-----------|----------------------|-------|----------|---------------------|--|
| Important Files | Scheduled | Done | admin | 125.6 MB | 2011-08-09 08:00 | |
| Restore Existin... | - | Done | admin | 125.6 MB | - | |
| Restore NSMAX | - | Done | admin | 125.6 MB | - | |

Restore NSMAX

Information

Delete

Modify a Restore Job

DASHBOARD - FRONT USB PORT (EXPANSION)

This page provides information on devices connected to the front USB expansion port. Please note that the rear USB device port is meant to plug the network storage device to your computer.

USB Printer

Your LaCie network storage device features a printer server.

To activate it:

1. Check the box next to **Activate the printer server**
2. Power on the printer and connect it to the front USB expansion port.
3. Once connected, the printer will be listed on the **Dashboard - External Ports** page, and it will become available throughout your network. Correct printer drivers must be installed on the host computer.

Important info: For multi-function printers, only the print feature is supported. If your printer has a scan feature, for example, it will not work when connected to LaCie NAS.


In addition, only PostScript printers are supported. If your printer does not display on the Dashboard - External Ports page, it is likely that the printer does not support PostScript printing. This is frequently the case with multi-function and photo printers. LaCie cannot guarantee that your printer supports the proper protocols to make it a networked printer.

External Drives

Connect an external hard drive to the front USB port and it will be listed on this page. Once connected, the drive's partition(s) will behave similarly to OpenShare or USBShare on your LaCie network storage. You may view the volume(s) on the **Dashboard - Shares** page and access data using your operating system's file system (an Explorer window for Windows users, and the Finder for Mac users).

Important info: External hard drives connected to the USB expansion port are always fully public on the network and their names cannot be changed.

To avoid damaging your external hard drive's file system, click the **EJECT** button before disconnecting it from your LaCie NAS.

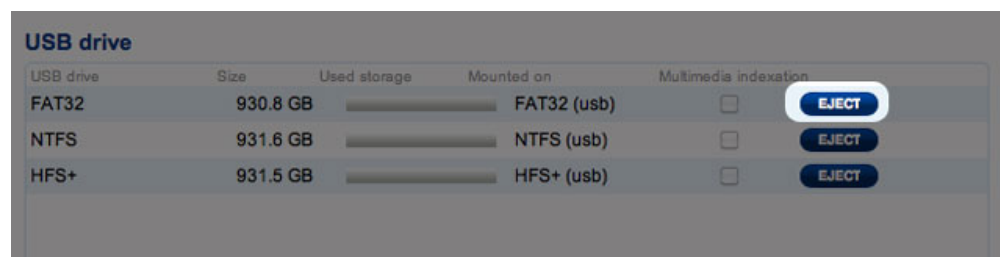


| USB drive | Size | Used storage | Mounted on | Multimedia indexing | |
|-----------|----------|--------------|-------------|--------------------------|--------------|
| FAT32 | 930.8 GB | <div></div> | FAT32 (usb) | <input type="checkbox"/> | EJECT |
| NTFS | 931.6 GB | <div></div> | NTFS (usb) | <input type="checkbox"/> | EJECT |
| HFS+ | 931.5 GB | <div></div> | HFS+ (usb) | <input type="checkbox"/> | EJECT |

Technical note: External USB hard disks must be formatted in one of the supported systems to be compatible with your LaCie storage device: MS-DOS (FAT32), NTFS, HFS+ (non-journaled only), EXT3, or XFS. Please note that HFS+ is read only.

DASHBOARD - NETWORK

Standard Tab

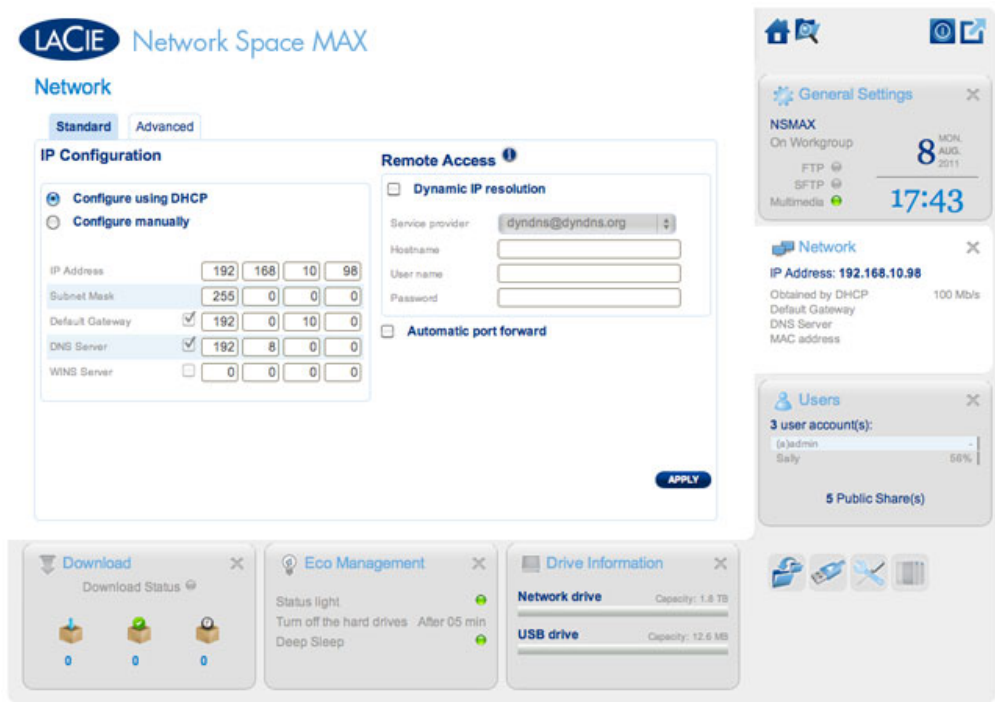

IP Configuration

Choose between **Configure using DHCP** and **Configure manually**. If your network is DHCP-enabled, as are most consumer networks, the LaCie network storage will automatically be assigned an IP address. As a result, most users will see that the table has been filled in with values. If you select **Configure manually**, you will be able to modify the table values to conform to your non-DHCP-managed network.

Important info: Please make certain that you do not change the IP address without a complete understanding of your network. You may risk losing contact with your network storage device if the IP address is not compatible with your network. Contact your Internet provider or network administrator for further information.

Remote Access

See [Advanced Accessibility Features](#).

Advanced Tab



Network

Standard

Advanced

Proxy Configuration

☒ Enable proxy

Proxy Server

192.0.0.0

Port

4125

Optional

☐ Authentication required

Name

Password

SMTP Configuration

☒ Enable SMTP

SMTP Server

email.com

Port

25

Optional

☒ Use SSL

☒ Authentication required

Name

admin

Password

☐ Send a verification email

Email address

admin@email.com

APPLY

Proxy Configuration

Your LaCie network storage can be configured to connect to a proxy server:


1. Activate the feature by clicking the **Enable proxy** box
2. Fill in the proxy server address, port, and optional authentication information
3. Click **APPLY**

SMTP Configuration

To permit your LaCie network storage to send alert emails to users, configure the SMTP settings in this section. Verify that the alert system works by:

1. Check the box next to **Send a verification email**
2. Fill in the field for **Email address**
3. Clicking the **APPLY** button.

DASHBOARD - ECO MANAGEMENT

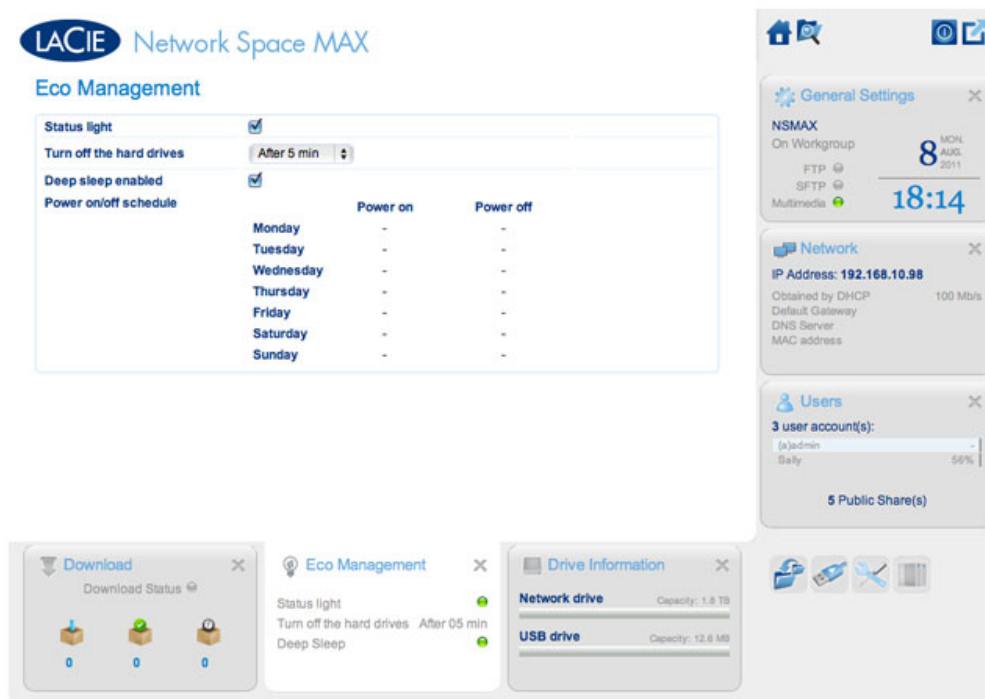

- **Status light on:** Uncheck this box to turn off the front blue LED. Note that this will not disable warning indicators.
- **Turn off the hard drives:** Set the duration of inactivity after which the disks will revert to Eco mode. In Eco mode, the disks spin down to reduce power consumption. The product leaves Eco mode automatically when a request is sent to the drive.
- **Deep sleep enabled:** Deep sleep means that the drive will enter a very low energy consumption mode when you activate it using the **Shutdown Options** button on the Dashboard. This mode can also be triggered by holding the device's power button. To wake the drive from Deep Sleep Mode, press the power button or use the Wake on LAN function in the LaCie Network Assistant (see [Wake on LAN](#)).

Important info: When deep sleep mode is activated, all processes, including downloads and backups, will be terminated.

- **Power on/off schedule:** Set the drive to activate/deactivate deep sleep mode at a certain time to save energy. Click the setting in the **Power on** and **Power off** columns to enter the time for each day of the week.

Eco Management

[illegible]

Schedule Deep Sleep Mode

Eco Management


| | | |
|--------------------------|-------------------------------------|-----------|
| Status light | <input checked="" type="checkbox"/> | |
| Turn off the hard drives | After 5 min <input type="text"/> | |
| Deep sleep enabled | <input checked="" type="checkbox"/> | |
| Power on/off schedule | | |
| | Power on | Power off |
| Monday | 08:00 | 23:00 |
| Tuesday | 08:00 | 23:00 |
| Wednesday | 06:00 | 22:00 |
| Thursday | 07:00 | 23:30 |
| Friday | 08:00 | 23:00 |
| Saturday | 10:00 | 18:00 |
| Sunday | 11:00 | 17:00 |

Example of a Deep Sleep Mode Schedule


DASHBOARD - RAID MANAGEMENT

See [Manage RAID](#) and [Adding a Disk](#).

DASHBOARD - FILE BROWSER

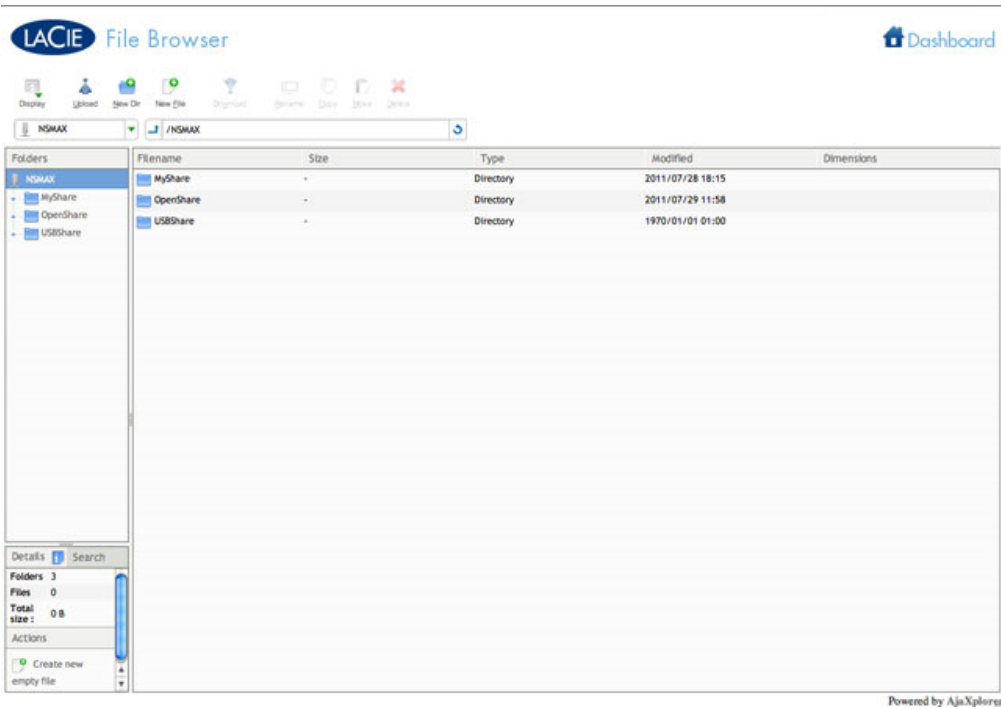

The Dashboard features an interactive file browser that allows you to manage and transfer files via HTTP. Access the File Browser by clicking its icon in the upper right-hand corner of the Dashboard.

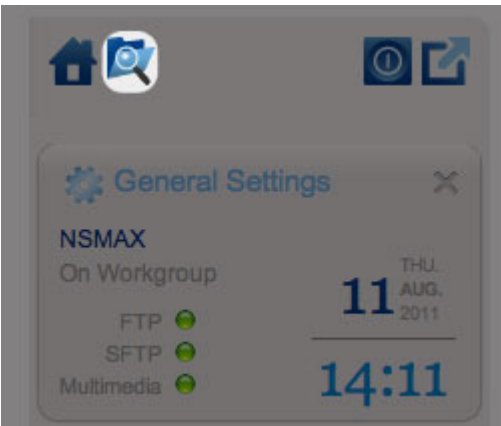

File Browser icon

The File Browser allows you to transfer, copy, and delete files, as well as view photos in thumbnails and even stream multimedia content such as mp3 music files. It is a convenient way to interact with files stored on your external hard drives through the network, whether they are connected via the local network or the Internet (see [Remote Access](#)). Also, since the File Browser offers faster transfers than desktop drag-and-drop, it is more effective when copying large files.

The File Browser is composed of four parts:

1. The toolbar contains the icons for the various actions you can perform on the files in the browser. The toolbar is located at the top of the browser window.

n
s
s
u
c
h
a
s
c
h
a
n
g
i
n
g
t
h
e
w
a
y
f
i
l
e
s
a
r
e
d
i
s
p
l
a
y
e
d
a
n
d
u
p
l
o
a
d
i
n

g
f
i
l
e
s
t
o
s
t
r
e
a
m
i
n
g
f
i
l
e
s
a
n
d
c
r
e
a
t
i
n
g
f
o
l
d
e
r
s
. 2. **F
o
l
d
e
r
s
h**

o
w
s
t
h
e
f
o
l
d
e
r
s
t
r
u
c
t
u
r
e
o
n
t
h
e
s
e
l
e
c
t
e
d
s
h
a
r
e
. 3.

**D
e
t
a
i
l
s
d
i
s**

p
l
a
y
s
i
n
f
o
r
m
a
t
i
o
n
o
n
a
s
e
l
e
c
t
e
d
f
i
l
e
,
s
u
c
h
a
s
n
a
m
,
e
t
h
u
m
b
n
a
i
l


(
i
m
a
g
e
f
i
l
e
s
) s
,
f
i
l
e
t
y
p
e
,
d
i
m
e
n
s
i
o
n
s
(
p
h
o
t
o
s
) s
,
o
r
d
u
r
a
t
i
o
n
(
v

i
d
e
o
s
) s
,
w
h
i
l
e
S
e
a
r
c
h
a
l
l
o
w
s
y
o
u
t
o
s
e
a
r
c
h
f
o
r
f
i
l
e
s
b
a
s
e
d
o
n
f

i
l
e
n
a
m
e
. e
4. T
h
i
s
s
e
c
t
i
o
n
d
i
s
p
l
a
y
s
t
h
e
f
i
l
e
s
c
o
n
t
a
i
n
e
d
i
n
a
s
e
l

ected folder.
To view the file
s that
human
bana
liss
click
Thumbs
in

t
h
e
T
o
o
l
b
a
r

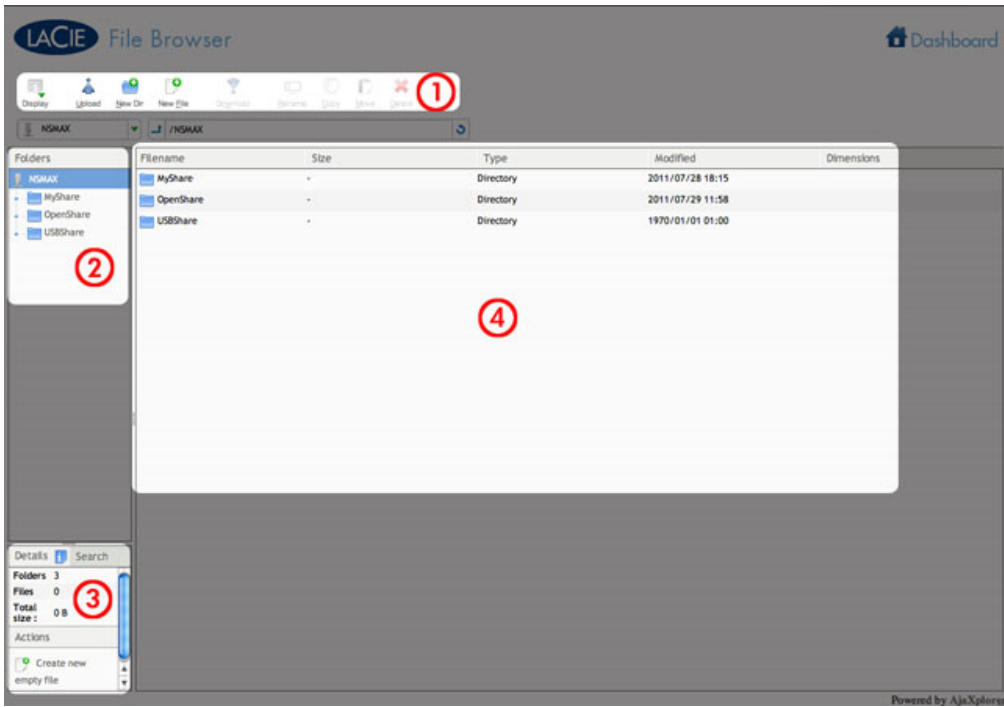

You can view photos, edit text files, and stream certain types of music. Select the file, then:

▪
P
h
o
t
o
a
n
d
T
X
T
f
i
l
e
:
s
C
l
i
c
k
t
h
e
O
p
e
n
w
i
t
h
...
b
u
t
t
o
n
i
n
t
h
e
t
o
o

