













# LED BEHAVIOR

The front LED indicates drive status and activity.

**Technical note:** Even if you have turned off the front LED using the Dashboard administration tool ([Dashboard - Eco Management](#)), events triggering a red light will always cause it to turn on.

Network Space 2

Front LED Color	State
Off	The device is: turned off/in Deep Sleep Mode or the <b>Status light</b> has been disabled in the Dashboard administration tool ( <a href="#">Dashboard - Eco Management</a> )
Blue: Fast blinking 	Occurs as the device is booting and will cease once the drives are fully initialized
Blue: Static 	Device is ready
Blue: Flickering 	Drive working (read/write)
Red: Blinking 	Device alert (i.e. temperature warning)
Red: Static 	Temperature alert (critical level) – the device will shut off
Red/Blue: Blinking 	Automatic backup in progress

Front LED Color	State
Off	The device is: turned off/in Deep Sleep Mode or the <b>Status light</b> has been disabled in the Dashboard administration tool ( <a href="#">Dashboard - Eco Management</a> )
Blue: Fast blinking 	Occurs as the device is booting; will cease once the drives are fully initialized
Blue: Static 	Device is ready
Blue: Flickering 	Drive working (read/write) or RAID is building/recovering
Red: Blinking 	Device alert (i.e. temperature warning) or RAID is degraded
Red: Static 	Temperature alert (critical level – the product will shut off) or RAID is broken
Red/Blue: Blinking 	Automatic backup in progress