## **REMOTE DESKTOP CONNECTION**

You may revise the settings of your LaCie professional server using the Dashboard from a Windows workstation. It is also possible to access the server desktop for further administrative options. There are two options to view the server desktop:

- Connect a USB keyboard, USB mouse, and a VGA monitor directly to their respective ports on the back of the server. Please note that this option may not apply to all servers.
- Launch Windows Remote Desktop Connection from a computer on the same network as the LaCie server.

The instructions below will help you connect to the server via Windows Remote Desktop:

- 1. From a Windows workstation on the same network as the server, go to **Start > Remote Desktop Connection** or **Start > Programs/All Programs > Accessories > Remote Desktop Connection**.
- 2. Enter the network name or IP address of your server then click **Connect**.

Nemote Desktop Connection						
<b>N</b>	Remote Desktop Connection					
Computer:	5bigofficeplus	-				
User name:	5BIGOFFICEPLUS\Administrator					
You will be asked for credentials when you connect.						
<b>Options</b>	]	Connect	Help			

3. Enter the administrator Login and Password for your server.

Windows Security	/	<b>—</b> ×
Enter your of These credenti	credentials als will be used to connect to 5bigofficepl	us.
	Administrator	
	Use another account	
📃 Reme	mber my credentials	
	OK	Cancel

4. Click **Yes** at the certificate prompt.

Remote Desktop Connection				
The identity of the remote computer cannot be verified. Do you want to connect anyway?				
The remote computer could not be authenticated due to problems with its security certificate. It may be unsafe to proceed.				
Name in the certificate from the remote computer: 5bigOfficePlus				
Certificate errors				
The following errors were encountered while validating the remote computer's certificate:				
The certificate is not from a trusted certifying authority.				
Do you want to connect despite these certificate errors?				
Don't ask me again for connections to this computer				
View certificate Yes No				

5. The desktop for the server will appear. You may manage the settings or access files.

	 Sbigotficeplus	- 6 ×	
Computer			
, 💟			
Recycle Bin			
<b>5</b> 5			
Dashboard			
🚱 🥾 🗷 📜			- 🏲 🗊 7.02 PM 2/13/2012

## **REMOTE DESKTOP AND TEAMING**

You can view and manage the Ethernet Team on the server desktop. To begin, follow the directions for accessing the server desktop from a Windows workstation (<u>Remote Desktop Connection</u>). Once you are on the server desktop:

1. Click on the **Start** menu then right-click on **Computer**. Select **Manage**.



2. Click on the arrow to the left of **Diagnostics** then click on **Device Manager**.



3. Click on the arrow to the left of **Network adapters**. To revise the settings, right-click on **TEAM** to select properties.



