


10. iSCSI の設定

注記: この機能は、5big Network 2 のみで利用できます。


5big Network 2 共有は iSCSI ターゲット クライアントとして設定できます。これにより、ネットワーク共有をローカル共有としてマウントできるようになります。この共有は、非ネットワーク ファイル システム (NTFS、HFS+、FAT32 など) でフォーマットできます。

ここでは、5big Network 2 のストレージの一部を **iSCSIShare** に配分することができます。iSCSIShare は、配分することにより自動的に作成されます。iSCSI に配分したストレージを変更するには:

1. 表示画面の iSCSI ドライブ の行の設定アイコンをクリックします。

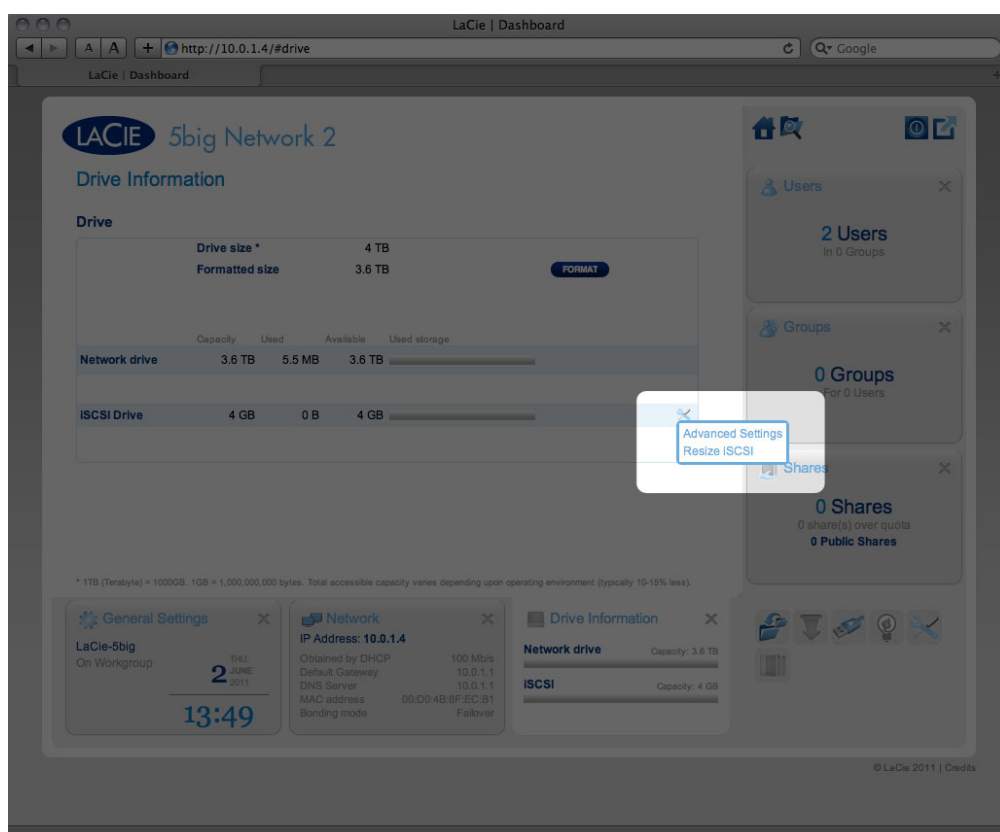


2. スライダをドラッグして、iSCSIShare に配分する容量を変更します。スライダをクリックした後、キーボードの左または右の矢印キーを使って微調整できます。

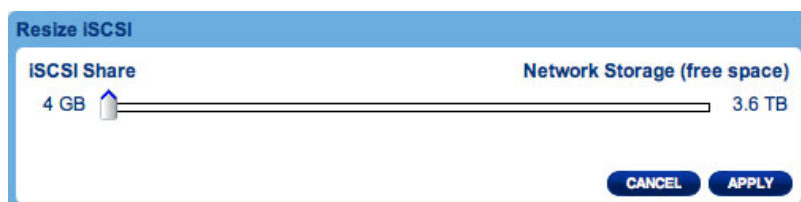

3. **[Apply (適用)]** ボタンをクリックし、ポップアップ ウィンドウで確定入力します。
4. iSCSIShare のサイズが 2 TB を超える場合、オペレーティング システムのディスク管理ユーティリティ (Disk Utility for Mac および Disk Management for Windows) を使用して共有をフォーマットする必要があります。

5. 次に、Microsoft (Windows の場合) または他のサードパーティ ベンダーの iSCSI クライアント イニシエーターをインストールして設定する必要があります。詳細については、発行元のマニュアルを参照してください。

Dashboard は、数件のアドバンスド パラメータを提供しています。設定アイコンをクリックし、**[Advanced Settings (高度な設定)]** を選択します。このウィンドウでは、iSCSIShare に関連した高度なパラメータを変更できます。

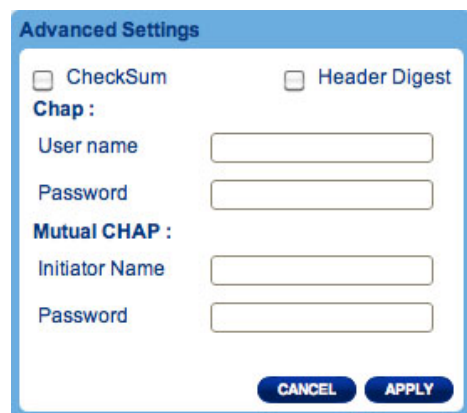The image shows a dialog box titled "Advanced Settings". At the top, there are two checkboxes: "Checksum" and "Header Digest", both of which are currently unchecked. Below these, the section "Chap:" is followed by two input fields: "User name" and "Password". Underneath, the section "Mutual CHAP:" is followed by two more input fields: "Initiator Name" and "Password". At the bottom right of the dialog box, there are two buttons: "CANCEL" and "APPLY".

Advanced Settings

☐ CheckSum ☐ Header Digest

Chap :

User name

Password

Mutual CHAP :

Initiator Name

Password

CANCEL APPLY

上記の値を変更した後、**[Apply (適用)]** をクリックします。